

RF Dual Color Wall Mounted Controller

Important: Read All Instructions Prior to Installation

Function introduction

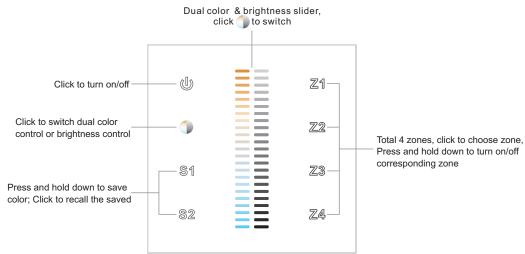

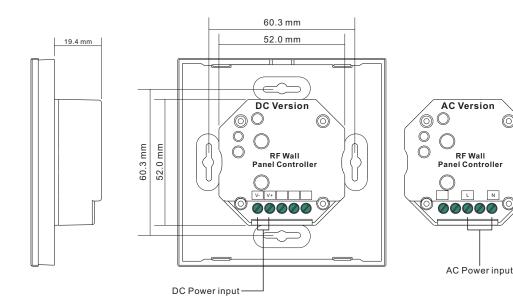

Product Data

		DC Version	AC Version
	Output Signal	RF signal	RF signal
	Power Supply	12-24VDC	100-240VAC
	Power consumption	20 mA	20 mA
	Operating temperature	0-40°C	0-40°C
	Relative humidity	8% to 80%	8% to 80%
	Dimensions	86x86x29.1mm	86x86x29.1mm



Touch sensitive


- · Glass interface(white & black)
- · Compatible with all universal series RF receivers, radio frequency: 869.5/434MHz
- · Control CCT color
- · Control 4 zone of RF receiver synchronously and separately
- Waterproof grade: IP20


Safety & Warnings


- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring diagram

DC Version

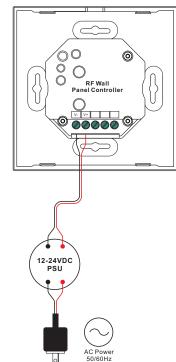

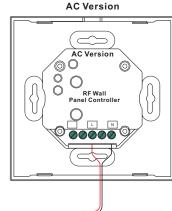

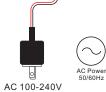



AC 100-240V


6

Operation

1. Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)

2. Power on, then touch the button 🕛 to turn on the controller, indicator of the controller turned blue


Pair with RF receiver

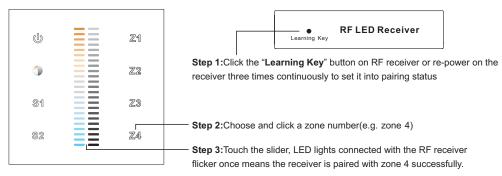

Save color/scene/mode

U	Z1	Step 1:Choose and click one or multiple paired zone numbers(e.g. zone 1)
٩	Z2	 Step 2: Touch the slider to select the scene you like Step 3: Press and hold any scene buttons of S1/S2(e.g. S1) , LED lights connected with the RF receiver flicker once means the color/scene was saved successfully.
S1	Z3	
S2	ZĄ	

Recall the saved colors/scenes

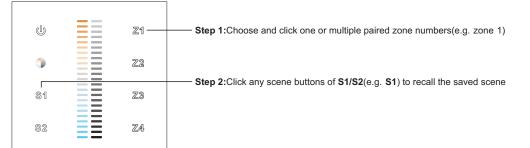

Installation

