



1. From chain type select pitch (P) of chain (example 16B => 1" pitch)
2. Select from required pitch, pos. A, B or 1 3/4" (example 1" pitch = A and 5/8" pitch is B, for 1 3/4" pitch there is a separate position)
3. Position the wear scale with the required pitch position A, B or 1 3/4" to the center of the pin head
4. When the selected pitch, pos. A, B or 1 3/4" appear opposite to the center of the pin head, the chain is worn out (3% wear)

