

SPX/SPZ **SPARTAN**



Mid Power Luminaire Range -Installation Guide

Zone 1 and 21 Variant CMI 21ATEX3317 & IEC Ex CMI 21 0037 or CMI 21UKEX3319 Zone 2 and 22 Variant CMI 21 ATEX3320 & IEC Ex CMI 21 0038 or CMI 21 IKEX3321

This installation guide provides instructions for installing the SPARTAN MP Highbay/ Floodlight series of explosion protected floodlights.

Overview



- Safety Instructions
- Installation
- 3 Maintenance
- Technical Specification
- 5 Trouble Shooting

Important information

The SPARTAN MP series of explosion protected floodlights/highbay are specialist devices, certified for use in specific operating environments.

The units must be installed in accordance with these instructions, must be correctly certified for the specific operating environment and must be installed by suitably qualified personnel.


If you have any queries about the installation or the certification of the unit - please contact Raytec for immediate assistance and advice.

1. Safety instructions

- Read this leaflet carefully before commencing to install the SPARTAN unit and retain it for future use. Installation can only be carried out by suitably qualified personnel.
- 2. Check the certification and "T" rating to ensure that the mains supply and the ambient temperature present is suitable for the unit being installed.
- If the SPARTAN unit is to be installed in areas of high vibration, please consult with Raytec.
- 4. Externally the SPARTAN unit housing is constructed from marine grade aluminium, and toughened glass, stainless steel brackets/fasteners and silicone gaskets, internally there are many non metallic components. The end user must ensure that these materials are suitable for the environment the SPARTAN unit will be installed in; Zone 1 and Zone 2 Hazardous areas
- 5. Check certification nameplate on front of floodlight to ascertain type of threaded cable entry on the luminaire. Select suitably certified ATEX/IEC Ex /UKEX cable glands and stopper plugs, these must be parallel thread, have a minium of 5 full thread engagement and be of a medium/fine tolerance to ISO965-1 and ISO965-3. The cable entry devices selected must maintain the IP rating of the luminaire.
- 6. The incoming mains cable should not exceed a temperature rise of 27°C above the ambient conditions: select suitable cable.
- 7. When the unit is installed correctly and in accordance with these installation instructions it will not harm humans or animals

Eve Safety:

Caution - EN62471 Risk Group 2 Classification - The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 0.230m is not expected

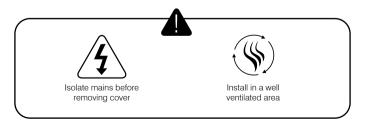



2. Installation


Mounting SPARTAN Unit


- To meet the requirements of certification a MINIMUM of 2 fixing points must be used, the fixing points must be suitable for the conditions of use.
- 2. The line diagrams below are for guidance only units may be mounted in any orientation

  Mounting MP SPARTAN Unit - Floodlight Application

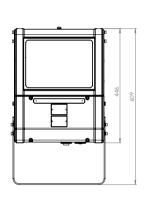






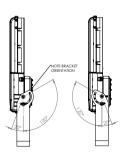


Mounting SPARTAN Unit - Highbay Application

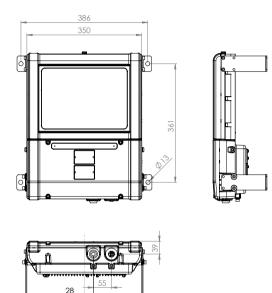

Typical wiring diagram

WIRING 71 & 72

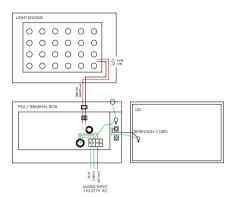

Wire the Mains cable into the terminal block. Provision has been made for this and identified as the E (Earth), L1 (Switched Live), L2 (permanent live) and N (Neutral) terminals. There are two pairs of contacts for each of these to facilitate a mains cable that can be looped in and out of the unit. The L2 terminals on a standard unit are not electrically connected but allows them to be used on the same circuits as *emergency units*.

- Attach mounting brackets as required with M6 screws/washers provided. Tighten to 10Nm. (see Bracket Orientation Diagram)
- 4. Open terminal block enclosure.
- Installer should earth the unit separately an internal and external earth point are provided as standard.
- 6. Connect wires to mains supply.
- If the unit is to be opened for any reason, disconnect mains.
- All SPARTAN floodlights/highbay have terminal blocks suitable for looping 4mm2 cable, only one cable should be connected to each terminal block connection – when incoming cables are installed a creepage and clearance of 5mm and 4mm respectively.
- Ensure no cables are trapped and gasket is seated correctly and replace terminal cover, tighten to 4Nm
- 10. If carrying out Insulation Resistance tests the normal method of insulation testing is to connect Live and Neutral together and test between this point and Earth to prevent the risk of damage to the electronic control gear.

3 Maintenance

- 1 It is essential that all SPARTAN units are maintained in accordance with the requirements of the EN60079-17 standard: (Electrical apparatus for explosive gas atmospheres - other than mines).
- 2. **IMPORTANT.** No modifications are permitted to the unit, all spare parts must be purchased from the manufacturer, unauthorized modifications or spare parts will invalidate certification and make the equipment dangerous.
- Isolate the SPARTAN unit from the mains supply and allow to cool before carrying out any maintenance work.
- 4 The unit has one power supply: in the event that a power supply needs to be replaced remove the terminal enclosure cover to get access to the power supply. Remove the power supply from the mains terminals then remove LED wires (white and white with red mark
- Disposal of packaging, SPARTAN units and old LED assemblies/power supplies 5 should be carried out in accordance with national regulations.

4. Troubleshooting

- 1. Ensure the two LED boards are correctly wired to terminal block. White/Red to White/ Red: White to White - paired cables.
- 2. Ensure Mains input is correctly connected.
- Ensure Mains Input is turned on at the source.

PROTECTION/CERTIFICATION


PROTECTION/CERTIFICATION - ZONE 1/21 VARIANTS CML21ATEX3317 or IEC Ex CML21.0037 or CML21UKEX3319 II 2 GD Ex eb mb IIC T4 Gb Ex tb IIIC T90°C Db Ta -40°C to +60°C IP66/IP67 110-277V AC

PROTECTION/CERTIFICATION - ZONE 2/22 VARIANTS CML21ATEX3320 or IEC Ex CML21.0038 or CML21UKEX3321 II 3 GD Ex ec mc IIC T4 Gc Ex to IIIC T90°C Do Ta -40°C to +60°C IP66/IP67 110-277V AC

4. Technical Specification

	60W version	120W version
Input Voltage	110-277V AC	
Input Current (230Vac, full load)	0.26A	0.52A
Consumption	60W	120W
Power Factor (230Vac, full load)	>0.97	
Mains Frequency	50/60Hz	
Inrush Current (I _{Peak} @50%)	53A, $\Delta t < 300 \mu s$	
Total Harmonic Distortion (230Vac, full load)	≤10%	
IP Rating	IP66/67	
Weight (std)	13.2Kg	13.2Kg
Dimensions	See previous pages for line diagrams	
ATEX and IECEx and UKEX Rating	See page 6	

Inrush Current Typical Curve

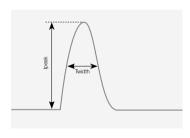

MCB Type	Rating	SPZ/SPX-MP15K (120W Version)
В	10A	4
В	16A	10
В	20A	12
В	25A	15
С	10A	8
С	16A	16
С	20A	20
С	25A	26

Declaration Of Conformity ② KK C € With The Atex Directive 2014/34/EU

& UK Directive SI 2016 No. 1107 (as amended)

Raytec Ltd. declares under our sole responsibility that the product(s) listed below conform with the relevant provisions of directive 2014/34/EU of 20th April 2016 and UK Directive SI 2016 No. 1107 (as amended)

Manufacturer Raytec Ltd

Unit 15. Wansbeck Business Park

Rotary Parkway Ashinaton Northumberland NE63 80W United Kinadom

Description of Equipment Spartan range of Mid Power Floodlights

Certification

CMI

Bodv

New Port Road

Ellesmere Port

CH65 4L7

Certificate numbers

CML21ATEX3317 or IEC Ex CML21.0037 or CML21UKEX3319 CML21ATEX3320 or IEC Ex CML21.0038 or CML21UKEX3321

ATEX Quality Assurance Notification CSA BV (2813) UKCA Quality Assurance Notification CSA UK (0518)

Eauipment Markina

II 2 GD Ex eb mb IIC T4 Gb Ta -40°C to +60°C

Ex tb IIIC T90°C Db Ta -40° C to $+60^{\circ}$ C IP66/IP67 110-277V AC

II 3 GD Ex ec mc IIC T4 Gc Ta -40°C to +60°C Ex to IIIC T90°C Do Ta -40°C to +60°C

IP66/IP67 110-277V AC

Compliance with the Essential Health and Safety Requirements has been assessed by reference to the following harmonised/designated standards -

EN 60079-0: 2018 EN 60079-7: 2015 + A1 2018

And also 2014/35/EU - Low Voltage Directive, 2014/30/EU - EMC Directive

Signed	B. Myren
Name Position	Barry Thompson Director
Dated	
Serial number	



Raytec Global (excluding Americas)

Tel: +44 (0) 1670 520055 sales@raytecled.com

Raytec Ltd.

Unit 15 Wansbeck Business Park, Rotary Parkway Ashington, Northumberland, NE63 8QW, United Kingdom

Raytec Americas

Tel: +1 613 270 9990 sales@raytecled.com

Raytec Systems Inc. 800-300 Terry Fox Drive, Ottawa, Ontario 2K 0E3, Canada

raytecled.com