

## SPX/SPZ **SPARTAN**

## High Power Luminaire Range -Installation Guide

Zone 1 and 21 Variant CML 17ATEX1148 & IEC Ex CML17.0074 Zone 2 and 22 Variant CMI 17ATEX4149 & IEC Ex CMI 17 0074 Zone 21 Dust only Variant CML 18ATEX3161 & IEC Ex CML18.0087

This installation guide provides instructions for installing the SPARTAN HP Highbay/ Floodlight series of explosion protected floodlights.

#### Overview



- Safety Instructions
- Installation
- Maintenance
- Technical Specification
- Trouble Shooting 5

#### Important information

The SPARTAN HP series of explosion protected floodlights/highbay are specialist devices, certified for use in specific operating environments.

The units must be installed in accordance with these instructions, must be correctly certified for the specific operating environment and must be installed by suitably qualified personnel.

If you have any queries about the installation or the certification of the unit - please contact Raytec for immediate assistance and advice.

#### 1. Safety instructions

- 1. Read this leaflet carefully before commencing to install the SPARTAN unit and retain it for future use. Installation can only be carried out by suitably qualified personnel.
- 2. Check the certification to ensure that the Zone, mains supply, ambient temperature present and 'T' rating are suitable for the environment the unit is being installed in.
- 3. If the SPARTAN unit is to be installed in areas of high vibration, please consult with Raytec.
- 4. The SPARTAN unit housing is constructed from marine grade aluminium and toughened glass, gaskets are silicone sponge, black encapsulant and o rings are silicone rubber, inner domes on LEDs are polycarbonate. The end user must ensure that these materials are suitable for the environment the SPARTAN unit will be installed in: Zone 1 and Zone 2 Hazardous areas.
- 5. Check certification nameplate on side of floodlight/highbay to ascertain type of threaded cable entry on the luminaire. Select suitably certified ATEX/IEC Ex cable glands and stopper plugs, these must be parallel thread, have a minimum of 5 full thread engagement and be of a medium/fine tolerance to ISO965-1 and ISO965-3. The cable entry devices selected must maintain the IP rating of the luminaire
- 6. The incoming mains cable should not exceed a temperature rise of 20°C above the ambient conditions: select suitable cable.
- 7. To ensure the safety of the equipment, ensure that the 'flamepath' on Zone 1 variants are free from any corrosion. No repairs are possible to flameproof joints - if in doubt please consult the manufacturer.
- External fasteners must have a vield strength of at least 600N/mm2
- 9. On Zone 1 variants the LED assembly contains no user serviceable parts, the luminaire must not be operated without all the individual LED polycarbonate covers in position, the IP66 rating must be maintained.




#### 2 Installation


#### Mounting SPARTAN Unit

- 1. To meet the requirements of certification a **MINIMUM** of 2 fixing points must be used, the fixing points must be suitable for the conditions of use.
- 2. The line diagrams below are for guidance only units may be mounted in any orientation


#### Mounting HP SPARTAN Unit - Floodlight Application

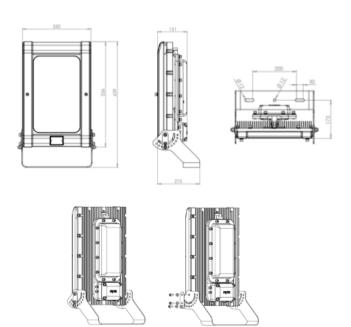

#### Mounting SPARTAN Unit - Highbay Application

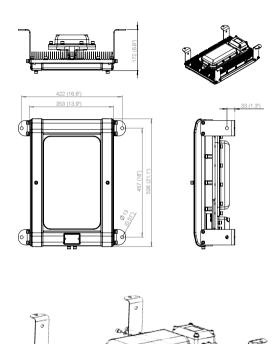

#### Typical wiring diagram

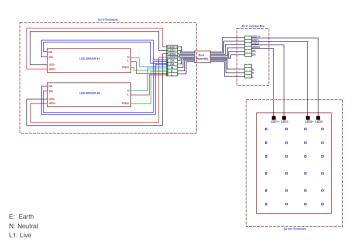

Wire the Mains cable into the terminal block. Provision has been made for this and identified as the E (Earth), L (Live), Ls (Live switched) and N (Neutral) terminals. There are two pairs of contacts for each of these to facilitate a mains cable that can be looped in and out of the unit. The Ls terminals on a standard unit are not electrically connected but allows them to be used on the same circuits as *emergency bulkheads*.

- Installer should earth the unit separately an internal and external earth point are provided as standard
- 4. Connect wires to mains supply.
- 5. If the unit is opened for any reason, disconnect mains
- All SPARTAN floodlights have terminal blocks suitable for looping 4mm2 cable, only one cable should be connected to each terminal block connection
- 7. To use DALI/Dimming interface, connect the DALI terminals on the terminal block

#### 3. Maintenance

- It is essential that all SPARTAN units are maintained in accordance with the requirements of the EN60079-17 standard: (Electrical apparatus for explosive gas atmospheres – other than mines).
- IMPORTANT. No modifications are permitted to the unit, all spare parts must be purchased from the manufacturer, unauthorized modifications or spare parts will invalidate certification and make the equipment dangerous.
- Isolate the SPARTAN Bulkhead from the mains supply and allow to cool before carrying out any maintenance work.
- 4. The unit has 2 independent power supplies; in the event that a power supply needs to be replaced remove the flameproof cover to get access to the power supply. Remove the power supply from the mains terminals then remove LED red and black wires.
- Disposal of packaging, SPARTAN units and old LED assemblies/power supplies should be carried out in accordance with national regulations.

#### PROTECTION/CERTIFICATION

PROTECTION/ CERTIFICATION ZONE - 1/21 VARIANTS

Il2 GD Ex db eb mb op is IIB T4 Gb Gb -50°C to +50°C Ex tb op is IIIC T104C Db Db -50°C to +50°C IP66 202-254V AC 186-250V DC or 110V-277V AC

CML17ATEX1148 or IEC Ex CML17.0074

PROTECTION/ CERTIFICATION - ZONE 2/22 VARIANTS

CML17ATEX4149 or IEC Ex CML17.0074

II 3 GD Ex nR ec mc op is IIC T4Gc
Gc -50°C to +50°C
Ex tb op is IIIC T104C Dc
Dc -50°C to +50°C

IP66 202-254V AC 186-250V DC or 110V-277V AC


PROTECTION/CERTIFICATION - ZONE 21 DUST ONLY VARIANTS

CML18ATEX3161 or IEC Ex CML 19.0087 Ex tb op is IIIC T104C Db Db -50°C to +50°C IP66 202-254V AC 186-250V DC or 110V-277V AC

#### 4. Technical Specification

	150W version	300W version
Input Voltage	202-254V AC 186-250V DC or 110V-277V AC see certification nameplate on product	
Input Current (230Vac, full load)	0.7A 1.4A	
Consumption	Consumption 150W 300W	
Power Factor (230Vac, full load)	>0.97	
Mains Frequency	50/60Hz	
Inrush Current (Ipeak @50%)	53A, $\Delta t < 300 \mu s$ 60A, $\Delta t < 300 \mu s$	
Total Harmonic Distortion (230Vac, full load)	≤3%	
IP Rating	IP66	
Weight (std)	22Kg	23Kg
Dimensions	See previous pages for line diagrams	
ATEX and IECEx Rating	See below	

#### **Inrush Current Typical Curve**

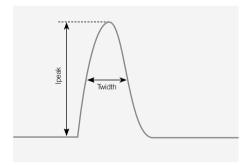

#### Max number of fittings allowed per MCB

MCB Type	Rating	SPZ/SPX-HP10K (120W Version)	SPZ/SPX-HP15K (180W Version)	SPZ/SPX-HP20K (240W Version)	SPZ/SPX-HP25K (300W Version)
В	10A	4	3	2	1
В	16A	10	6	4	3
В	20A	12	7	5	4
В	25A	15	10	7	6
С	10A	8	5	4	3
С	16A	16	8	6	5
С	20A	20	10	8	6
С	25A	26	16	13	9

#### 4.1 DALI Wiring Instructions

Maximum o	cable	length	Lin	m
-----------	-------	--------	-----	---

Cross section in mm*         25°C         50°C         75°C           0.14         31         28         26           0.50         112         102         93           0.75         168         153         140           1.00         224         204         187           1.50         300         300         281           2.00         300         300         300           2.50         300         300         300		Cross section in mm²				
0.50     112     102     93       0.75     168     153     140       1.00     224     204     187       1.50     300     300     281       2.00     300     300     300			25°C	50°C	75°C	
0.75     168     153     140       1.00     224     204     187       1.50     300     300     281       2.00     300     300     300		0.14	31	28	26	
1.00     224     204     187       1.50     300     300     281       2.00     300     300     300		0.50	112	102	93	
1.50     300     300     281       2.00     300     300     300		0.75	168	153	140	
2.00 300 300 300		1.00	224	204	187	
		1.50	300	300	281	
2.50 300 300 300		2.00	300	300	300	
		2.50	300	300	300	

#### 5. Troubleshooting

- Ensure the two LED boards are correctly wired to terminal block. Red to Red: Black to Black – paired cables
- 2. Ensure Mains input is correctly connected.
- 3. Ensure Mains Input is turned on at the source.
- If LED panel fails to light is it possible to identify if problem is with LED panel or power supply by swapping LED cables to opposite power supply to help identify problem.

### **Declaration Of Conformity** With The Atex Directive 2014/34/EU



Raytec Ltd. declares under our sole responsibility that the product(s) listed below conform with the relevant provisions of directive 2014/34/EU of 20th April 2016

Manufacturer Ravtec Ltd

Unit 15. Wansbeck Business Park

Rotary Parkway Ashinaton Northumberland NF63 8QW United Kinadom

Description of Equipment Spartan range of High Power Floodlights

Notified Rodies Sira Certification Services (0518)

Unit 6

Hawarden Industrial Park

Hawarden Deeside CH5 3US

Certificate CML17ATEX1148, CML17ATEX4149, IEC Ex numbers

CML 17.0074. CML18ATEX316 and, IEC Ex CML 18.0087

Quality Assurance Notification Sira (0518)

Equipment II2 GD Ex db eb mb op is IIB T4 Gb Marking

Gb -50C to +50C Ex th on is IIIC T104C Db Db -50C to +50C

IP66 202-254V AC 186-250V DC or 110V-277V AC

II 3 GD Ex nR ec mc op is IIC T4Gc

Gc -50 to +50C Ex tb op is IIIC T104C Dc Dc -50C to +50C

IP66 202-254V AC 186-250V DC or 110V-277V AC

Ex tb op is IIIC T104C Db Db -50C to +50C

IP66 202-254V AC 186-250V DC or 110V-277V AC

Compliance with the Essential Health and Safety Requirements has been assessed by reference to the following standards -

IFC 60079-0 · 2012 IEC 60079-7: 2015 IFC 60079-1 : 2014 IEC 60079-18: 2015 IEC 60079-25: 2015 IEC 60079-31: 2014

IEC 60079-15: 2010

And also 2014/30/FU - FMC Directive.

Signed	B. Myren
Name	Barry Thompson
Position	Director of Hazardous Area Division
Dated	
Serial number	

# raytec"

UK / Europe T: +44 (0) 01670 520055 hazsales@raytecled.com

Americas T: +1 613 270 9990 ushazsales@raytecled.com