

QUICK START

HDL80



- 1 ON/Measure button
- 2 Function button
- 3 Min/Max and continuous measurement
- 4 Add/subtract
- 5 Memory
- 6 Measurement edge
- 7 Backlighting/unit of measurement
- 8 OFF/Delete button


Hultafors

QUICK START HDL80



2 sec. → ON

 


2 sec. → OFF

1




1x



2

MEAS
ON

1x

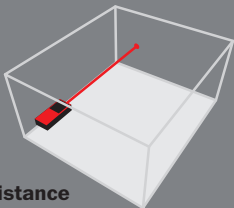

**Distance
measurement**


3

MAX/MIN

1x

MEAS
ON

1x = STOP

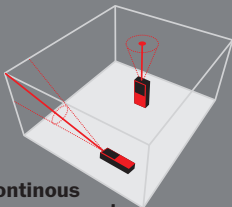

**Continuous
measurement**


4



1x



1x = STOP

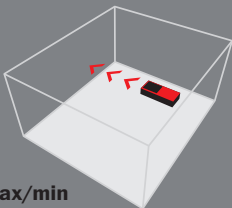


Max/min
measurement

5



1x

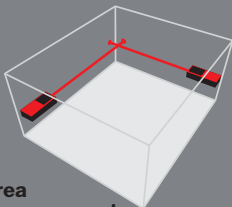

Area
measurement


6



Hultafors



2x

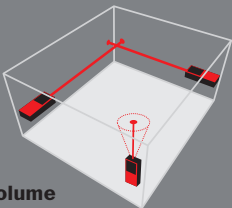


**Volume
measurement**

7



3x

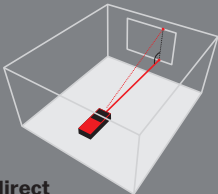


**Indirect
2-point measurement**

8



4x

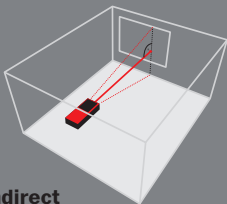

Indirect
3-point measurement

9



1x



$a + b$



2 sec.



$a - b$

10



1x

Memory



1... 20

11



Unit



Unit



2 sec.

m/ft/in/' "




Unit

1x



12

Quick battery replacement

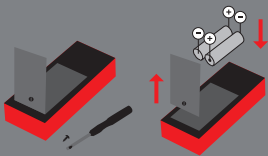

IP54

Please find the operating instructions on
hultafors.com

Hultafors

Hultaforsvägen 21 | Hultafors | Sverige

Phone +46 (0)33 723 75 50 | info@hultaforsgroup.se

hultafors.com



7 317844 091105

Art.no. 409110