

BA6A1

Exploded view diagram of the BA6A1 engine assembly. The diagram shows the main engine block (49) with various components and their assembly points indicated by numbered callouts. The components include:

- 103: Two small cylindrical components, likely O-rings or seals, located at the bottom of the engine block.
- 105: A small cylindrical component, likely a pin or clip, located near the bottom of the engine block.
- 106: A small cylindrical component, likely a pin or clip, located at the top right of the engine block.
- 107: A small cylindrical component, likely a pin or clip, located on the right side of the engine block.
- 108: A small cylindrical component, likely a pin or clip, located at the top right of the engine block.
- 109: Two small cylindrical components, likely pins or clips, located near the top of the engine block.
- 110: A small cylindrical component, likely a pin or clip, located on the right side of the engine block.
- 112: A small cylindrical component, likely a pin or clip, located near the top of the engine block.
- 117: A small cylindrical component, likely a pin or clip, located near the top of the engine block.
- 131: A small cylindrical component, likely a pin or clip, located near the top of the engine block.
- 132: A long, thin cylindrical component, likely a pin or clip, located at the top of the engine block.
- 133: A small rectangular component, likely a pin or clip, located on the left side of the engine block.
- 200: A small cylindrical component, likely a pin or clip, located near the top of the engine block.

