


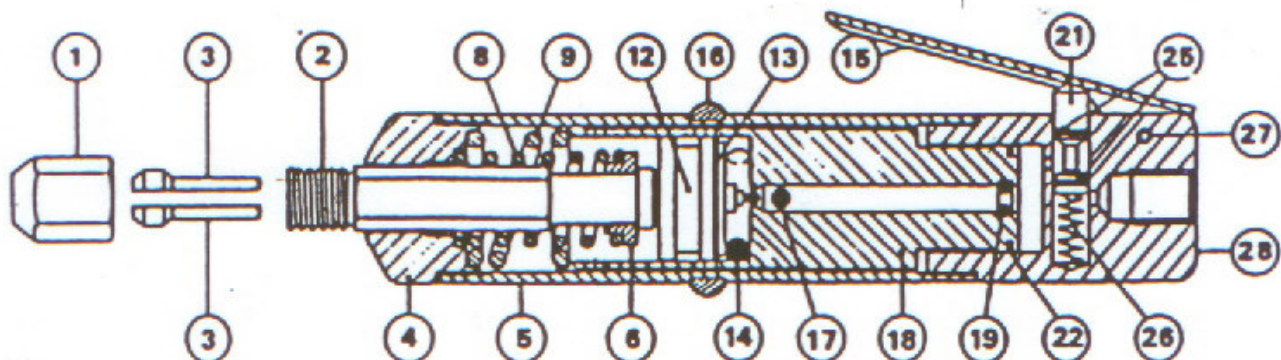

## HRV-95A SCALER Exploded view

|    |             |                             |
|----|-------------|-----------------------------|
| 1  | H-95-01     | Nut                         |
| 2  | H-95-02     | Piston extension            |
| 3  | H-95-03     | Chisel retainer (pair)      |
| 4  | H-90-04     | Front                       |
| 5  | H-90-05A    | Housing, normal             |
| 6  | H-90-06     | Support                     |
| 8  | S-100-08    | Spring                      |
| 9  | S-100-09    | spring                      |
| 12 | S-100-12    | Piston                      |
| 13 | S-100-13    | Piston ring                 |
| 14 | H-90-14     | Limit ring                  |
| 15 | H-95-15     | Throttle                    |
| 16 | H-90-16     | Support ring                |
| 17 | S-100-17    | Ball                        |
| 18 | H-90-18     | Cylinder                    |
| 19 | S-100-19    | Retainer                    |
| 21 | F-110-21-ss | Valve stem, stainless steel |
| 22 | S-100-22    | Piston ring                 |
| 25 | S-100-25    | O-ring (2pcs needed)        |
| 26 | F-110-26    | Valve spring                |
| 27 | S-100-27    | Pin                         |
| 28 | H-95-28     | Rear                        |