


□ Mechanical Build-up Installation

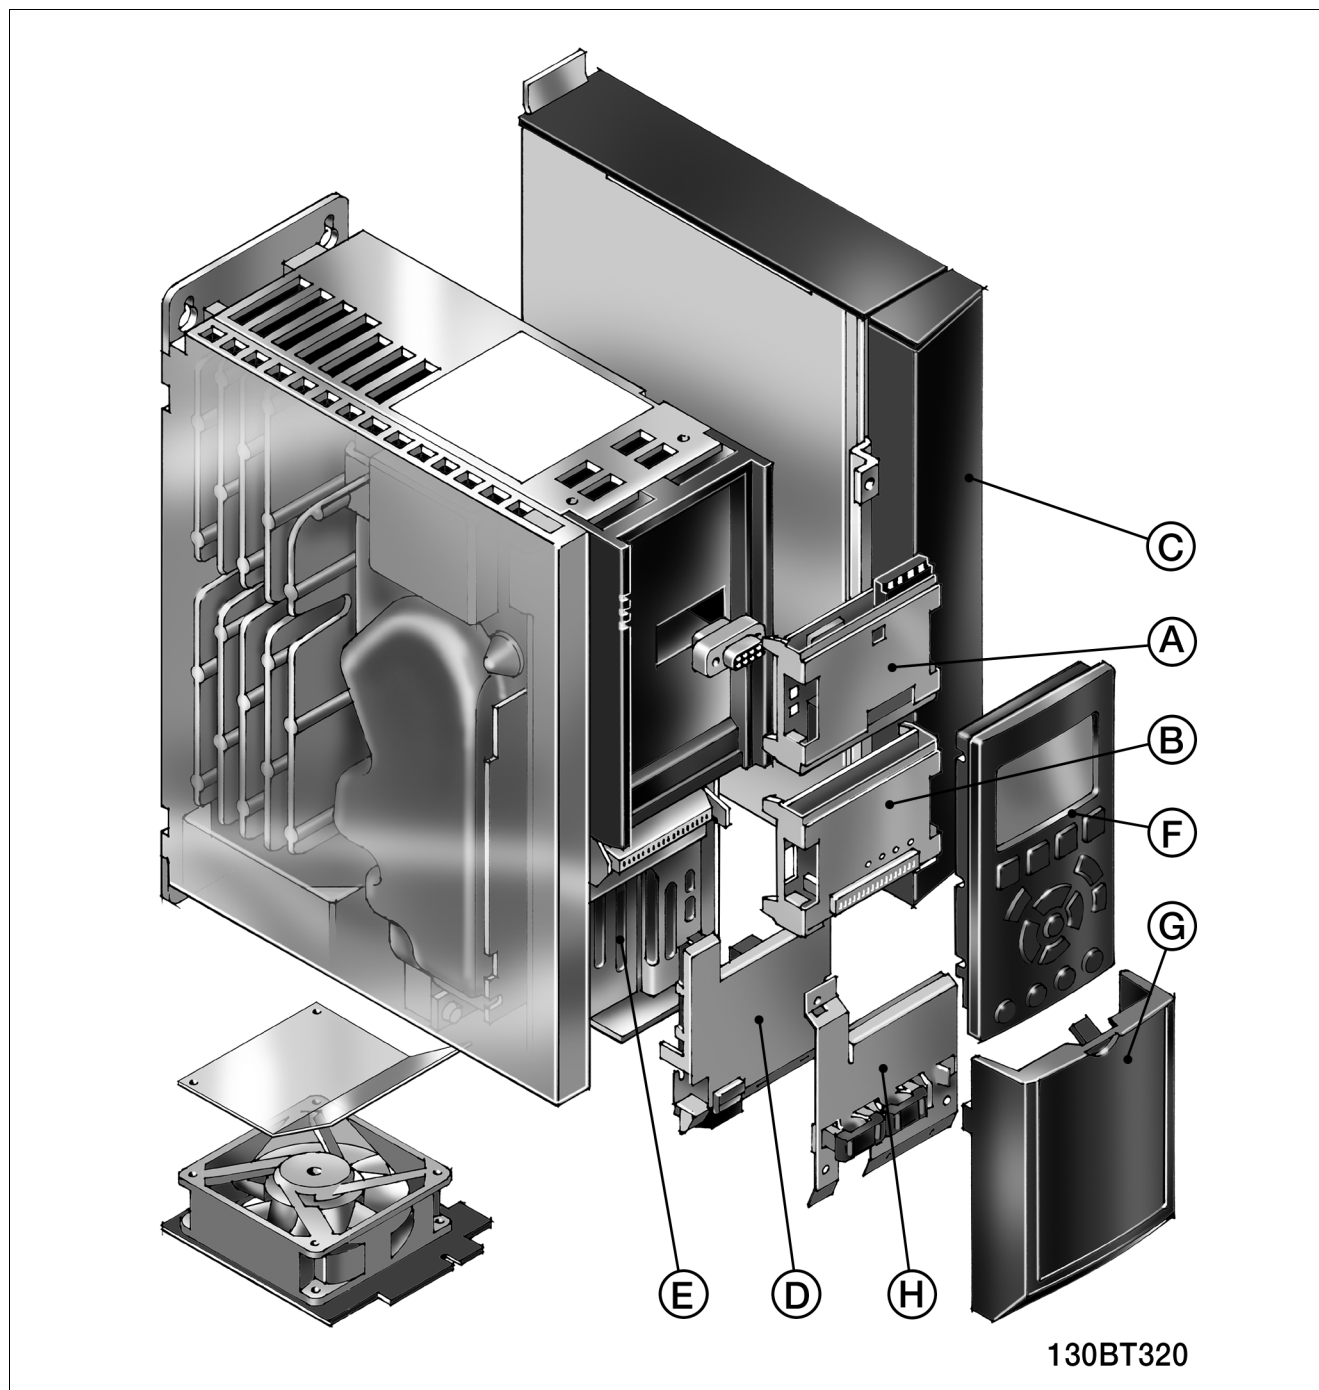

Follow these steps:

1. Remove the LCP (F) or Blind Cover
2. Remove the Terminal Cover (G)
3. Remove the Cable Decoupling Plate (H) and the plastic cover underneath
4. Insert the 24 V DC Back-up External Supply Option (D) in the Option Slot (E)
5. Mount the Cable Decoupling Plate (H)
6. Attach the Terminal Cover (G) and the LCP (F) or Blind Cover.

— FC 300 24 V External Supply Instruction —

□ External 24 V DC Supply

You can use the external 24 V DC supply as low-voltage supply to the control card or any option card installed. This enables full operation of the LCP (including the parameter setting) without connection to mains.

External 24 V DC supply specification


Input voltage range:	24 V DC $\pm 15\%$ (max. 37 V in 10 s)
Max. input current:	2.2 A
Max. cable length:	75 m
Input capacitance load:	$\leq 110\ \mu\text{F}$
Power-up delay:	$\leq 0.6\ \text{s}$

□ 24 V Back-Up Option

Terminal numbers:

Terminal 35: - external 24 V DC supply.

Terminal 36: + external 24 V DC supply.

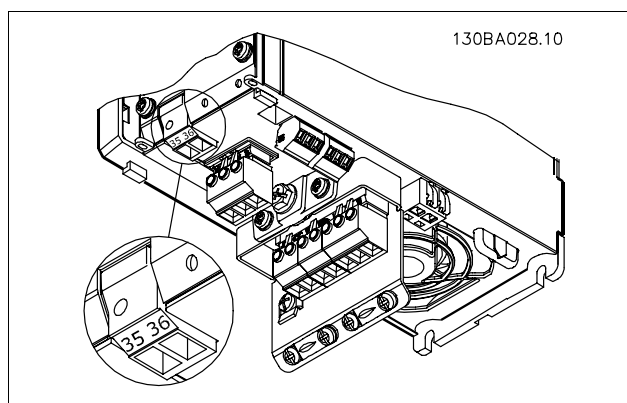

Connection to 24 V back-up supplier.