

VAERK

FROSTVAGT

FROST GUARD

BRUGERVEJLEDNING

.....
User manual



200W

ART. NR. 7800446004

DK – BRUGERVEJLEDNING

Læs venligst nedenstående anvisninger før brug af varmeapparatet

VAERK frostvagt er beregnet til at holde mindre lokaler, for eksempel teknikrum, frostfrie. Den er ikke egnet til opvarmning af opholdsrum.

VIGTIGT

1. Apparatet skal jordforbindes. Den leveres med en schuko-stikprop.
2. Opvarm ikke noget på husets kappe, da det vil beskadige varmeelementets kappe og reducere produktets levetid, og rengør ikke ved hjælp af kompressor eller højtryksrensere.
3. Nominel spænding: 220-240V AC.
4. Termostaten må ikke efterreguleres, hver gang den bruges.
5. Hvis du har brug for at regulere termostaten, skal du bruge sikre værktøjer som en sikker stige. Brug ikke usikker hjælp som en stol eller et bord. Hiv stikket til termostaten ud, hvis den ikke skal bruges i lang tid.
6. Stikkontakten skal installeres i nærheden af udstyret og skal være let tilgængeligt.

PRODUKTANVISNINGER

Varmeapparatet bruger et vandtæt varmeelement med høj varmeydelse og hurtig temperaturstigning. Den er stille, har en lang levetid, er sikker og driftssikker.

TEKNOLOGISKE SPECIFIKATIONER

Spænding: 220-240V AC

Frekvens: 50-60Hz

Effekt: 200W


Klasse I

VIGTIGE SIKKERHEDSANVISNINGER

1. Sørg for, at strømmen stemmer overens med den nominelle effekt. Det ydre metal skal være jordforbundet.
2. Kontroller isolationsmodstanden, inden apparatet bruges første gang. Isolationsmodstanden skal være mindst 1M ohm. Hvis enheden opbevares i længere tid eller opbevares forkert, kan isolationen blive beskadiget. Tør den, inden den igen tages i brug.
3. Opvarm ikke noget på overfladen. Dette vil forurene varmeelementets overflade og reducere levetiden. Undgå at ridse elementet.
4. Lad frostvagten stå oprejst på et plant underlag. Undgå at placere frostvagten med bunden i vejret eller på en hældning.
5. Lad strømmen være slået fra, når du udfører vedligeholdelse.
6. Frostvagten er ikke egnet til udendørs brug i fugtigt vejr, på badeværelser eller i andre våde eller fugtige miljøer.
7. Vær opmærksom på, at frostvagten kan blive meget varm og derfor bør placeres i sikker afstand fra brændbare genstande som møbler, gardiner og lignende.
8. **ADVARSEL: For at undgå overophedning må frostvagten ikke tildækkes.** 
9. Placer ikke frostvagten lige under et spændingsudtag.
10. Tilslut ikke frostvagten med en tænd-/sluk-timer eller andet udstyr, som automatisk kan tænde for enheden.
11. Frostvagten må ikke placeres i lokaler, hvor brændbare væsker eller gasser anvendes eller opbevares.
12. Hvis der bruges en forlængerledning, skal den være så kort som muligt, og den skal altid være helt rullet ud.
13. Slut ikke andre apparater til samme stikkontakt som frostvagten.
14. Brug ikke denne frostvagt i nærheden af et badekar, en bruser eller en swimmingpool.
15. Hvis strømforsyningsledningen er beskadiget, skal den udskiftes af producenten eller dennes servicetekniker eller en lignende kvalificeret person for at undgå stød.
16. Hvis apparatet anvendes til industrielle formål, må det kun bruges af lægfolk i butikker, i let-industrien og på gårde.
17. Dette apparat må ikke anvendes, sættes til eller rengøres af børn under 8 år. Personer med mangel på erfaring eller viden, må kun anvende produktet hvis de er under opsyn eller er blevet instrueret i, hvordan apparatet anvendes sikkert, og de forstår risikoen ved brug af apparatet.
18. Børn skal holdes væk fra apparatet, medmindre de konstant overvåges.
19. **FORSIGTIG – Nogle dele på dette produkt kan blive meget varme og kan forårsage forbrændinger. Vær særligt opmærksom, hvor børn og udsatte personer er til stede.**

INSTALLATION

1. Vægmonteret vertikalt.
2. Placeringen af den vægmonterede enhed (se billedet).
3. Varmeapparatet skal installeres mindst 6 cm over gulvet.

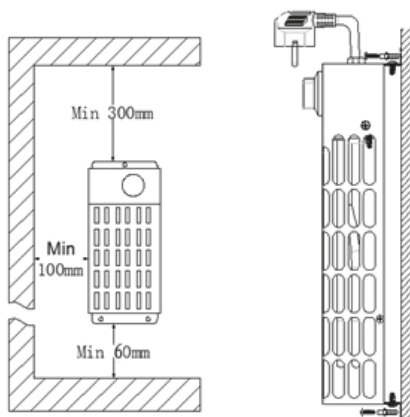

GARANTIOPLYSNINGER

Fabrikanten yder garanti i overensstemmelse med lovgivningen i kundens eget hjemland på minimum 1 år (Tyskland: 2 år) fra den dato, hvor apparatet sælges til slutbruger. Garantien dækker kun fejl i materiale og udførelse. Reparationer under garanti må kun udføres af et autoriseret servicecenter. Når der rejses krav under garantien, skal den originale købsfaktura (med købsdato) indsendes. Garantien gælder ikke i tilfælde af:

- Normal slitage
- Forkert brug, f.eks. overbelastning af apparatet eller brug af ikke-godkendt tilbehør
- Brug af magt, skader forårsaget af ydre påvirkninger
- Skader forårsaget af manglende overholdelse af brugervejledningen, f.eks. tilslutning til uegnet strømforsyning eller manglende overholdelse af monteringsvejledningen
- Delvist eller helt demonterede apparater



KORREKT BORTSKAFFELSE AF DETTE PRODUKT

Dette symbol angiver, at produktet ikke må bortskaffes sammen med andet husholdningsaffald i hele EU. Undgå eventuel skade på miljøet og den almene sundhed på grund af ukontrolleret bortskaffelse af affald ved at genbruge det ansvarsbevidst og fremme bæredygtig genbrug af materialeressourcer. Ved returnering af brugt udstyr skal du anvende egnede retur- og indsamlingssystemer eller kontakte forhandleren, hvor du købte produktet. Denne kan tage produktet tilbage med henblik på miljøvenlig genanvendelse.



Stationsalléen 40 · DK-2730 Herlev



UK – USER MANUAL

Please read the instruction below before using the appliance

VAERK frost guard is designed to keep smaller rooms, for example technical rooms, frost-free. It is not suitable for heating living spaces.

IMPORTANT

1. The product must be grounded. It is delivered with a schuko plug.
2. Do not heat up anything on the housing cover, as this will damage the heating component cover and reduce the product's service life, and do not use taper things to blow the component.
3. Nominal voltage: 220-240V AC.
4. Do not readjust the thermostat every time you use it.
5. If you need to adjust the thermostat, please use safe tools such as a safe ladder for climbing. Do not use a unsafe aid such as a chair or table. Unplug the thermostat if it isn't to be used for a long time.
6. The socket outlet must be installed near the equipment and be easily accessible.

PRODUCT INSTRUCTION

The appliance uses a waterproof heating element with high heating efficiency, rapid temperature rising, and which is silent, has a long service life, is safe and reliable.

TECHNOLOGY SPECIFICATIONS

Voltage: 220-240V AC

Frequency: 50-60Hz

Power: 200W


Class I

IMPORTANT SAFETY INSTRUCTIONS

1. Ensure the power matches the rating power. The exterior metal must be grounded.
2. Check the insulating resistance prior to using the device for the first time. The insulating resistance must be at least 1M ohm. If the device is stored for a long period of time or improperly, the insulation could be damaged. Please dry it before resuming use.
3. Do not heat up anything on the surface to avoid polluting the surface of the heating component, as this will reduce its service life. Avoid scraping the component.
4. Put the appliance upright on a level surface. Avoid placing it upside down or on a slope.
5. Keep the power off when performing maintenance.
6. The appliance is not suitable for outdoor use in damp weather, in bathrooms or in other wet or damp environments.
7. Please note that the appliance can become very hot and should therefore be placed at a safe distance from flammable objects such as furniture, curtains and similar.
8. **WARNING: In order to avoid overheating, do not cover the appliance.** 
9. Do not place the appliance immediately below a power outlet.
10. Do not connect the appliance using an on/off timer or other equipment which can automatically switch the device on.
11. The appliance must not be placed in rooms where flammable liquids or gases are used or stored.
12. If an extension cord is used, it must be as short as possible and always be fully extended.
13. Do not connect other appliances to the same mains socket as the appliance.
14. Do not use this appliance anywhere near a bath, a shower or a swimming pool.
15. If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a shock hazard.
16. If the appliance is used for industrial purposes, it should only be used by laymen in the shops, in light industry and on farms.
17. This appliance should never be used, plugged in or cleaned by children under the age of 8 years old. Persons with lack of experience and knowledge may only use this product, if they are under supervision or have been instructed in how to use the appliance in a safe manner and understand the hazards involved. Children should never play with or near the appliance.
18. Children of less than 8 years old, should be kept away from the appliance unless continuously supervised.
19. **CAUTION — Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.**

INSTALLATION

1. Wall-mounted vertically.
2. The position of the wall-mounted device (see Picture).
3. The appliance must be installed at least 6 cm above the floor.

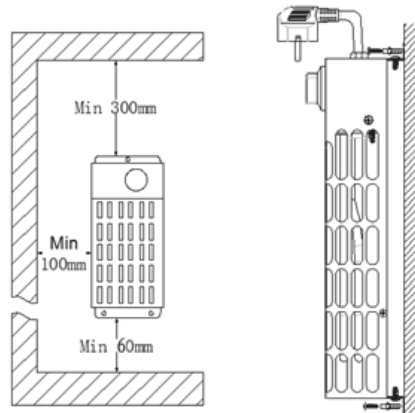

WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user. The warranty only covers defects in material or workmanship. The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted. The warranty does not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance or the use of non-approved accessories
- Use of force; damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances



CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed of together with other kinds of household waste throughout the EU. To prevent any possible harm to the environment or human health due to uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product in for environmentally safe recycling.



Stationsalléen 40 · DK-2730 Herlev

