




Datablad | Varenummer: 207-1373

Gelbox; inline forbindelse; til kabler; med gel; Serie 221; max. 4 mm²-stikforbindelser; uden fjedersamlemuffer; Størrelse 2; grå

<https://www.wago.com/207-1373>

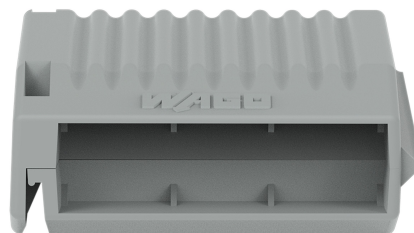

Farve: ■ grå

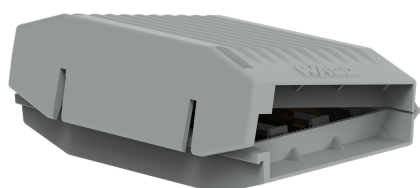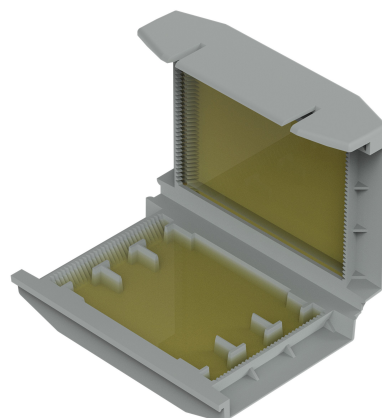

Note on Packaging Unit (PU) and Subpackaging Unit (SPU):

If you order a full PU, you will receive our eco-friendly, sustainable cardboard blisters packed in a shelf-ready box.

If you order a quantity smaller than a full PU, you will receive the eco-friendly, sustainable cardboard blisters without a shelf-ready box.

Please refer to the system description for the splicing connectors that can be used.

Your benefits:

- Easy, fast and safe to use
- Can be used immediately and accessed again later
- Silicon-free
- Label-free
- Suitable for indefinite storage
- The complete system consisting of WAGO's gelboxes and splicing connectors has been VDE-tested and IPX8-certified.

Tilslutningsdata

Connection 1

Aktiveringstype	Locking system
-----------------	----------------

Geometrische Daten

Bredde	56,9 mm / 2.205 tommer
Højde	17,8 mm / 0.669 tommer
Dybde	41,7 mm / 1.614 tommer

Mekaniske data

Montagetype	Flying leads
Beskyttelses klasse	IPX8

Materiale Data (engelsk)

Note på materiel data	Information on material specifications can be found here
Farve	grå
Kapslingsmateriale	Polypropylene
Brand last	0 MJ
Vægt	25.9 g

Miljøforhold

Omgivende lufttemperatur (drift)	-55 ... +85 °C
Omgivende lufttemperatur (opbevaring)	0 ... +40 °C

Kommercielle data

PU (SPU)	28 (4) Stykke
Oprindelsesland	DE
GTIN	4066966350067
Told tarifnummer	85389099990

Environmental Product Compliance	
RoHS Compliance Status	Compliant,No Exemption

Downloads

Documentation

System Description		
System Description 207 Series Gel boxes	pdf 1156.45 KB	
System Description 207 Series Gel boxes	pdf 1191.37 KB	

Betjeningsvejledning



Lift the flap and pull the cover perforation forward.



Press in the perforation on the sides.



Tear off the cover from the perforation.



As a counter display: Bend the rear flap at the fold, straighten it and fix it in the cardboard cut-out



If the flap is not required, tear off from the perforation.