



Starfix™ applicator

NEW

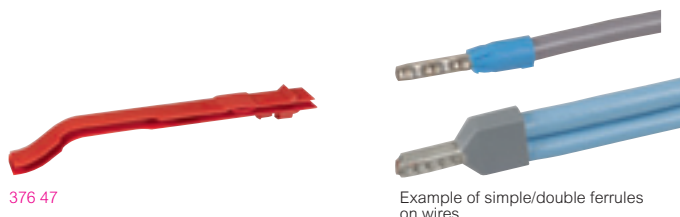

376 47

Example of simple/double ferrules on wires

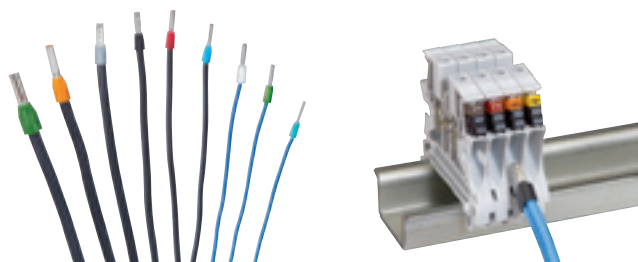

Example of different wires and ferrules

Pack	Cat.Nos	Starfix applicator
		For Starfix crimping tool
		For dispensing strips of ferrules in Starfix crimping tools Cat.Nos 376 08/09/10
		For ferrules cross-section (mm²)
10	376 46	0.25 and 0.34
10	376 47	0.5 to 2.5
10	376 48	4 and 6
		Colour
		yellow
		red
		orange

Starfix™ applicator

Correspondence table

Cross-section (mm²)	Simple ferrule	Large capacity ferrule - refills	Starfix applicator
Ferrule			
0.5	376 61	376 41	376 47
0.75	376 62	376 42	376 47
1	376 63	376 43	376 47
1.5	376 64	376 44	376 47
2.5	376 66	376 45	376 47

Dimensions (mm)

Simple ferrules

Cat.Nos	Cross-section (mm²)	A	B	C	D
376 50	0.25	8	14.5	1.1	3
376 60	0.34	8	14.5	1.1	3
376 61	0.5	8	14.5	1.5	3.4
376 62	0.75	8	14.5	1.5	3.4
376 63	1	8	14.5	1.7	3.6
376 64	1.5	8	14.5	2	4.1
376 66	2.5	8	14.5	2.6	4.8
376 67	4	12	21	3.2	5.7
376 68	6	12	23	3.9	7.2
376 69	10	12	21	4.9	8.1
376 72	16	12	23	6.3	9.8
376 70	16	18	29	6.3	9.8
376 71	25	18	31	7.9	12
376 77	35	18	32	8.9	13.5
376 78	50	20	36	11.1	16.1

Double ferrules

Cat.Nos	Cross-section (mm²)	A	B	C	D	E
376 87	2 x 0.75	8	15	2.1	6	3.3
376 88	2 x 1	8	15	2.35	6	4
376 89	2 x 1.5	8	16	2.6	7.2	4.2
376 90	2 x 2.5	10	18.5	3.3	8.4	4.8

Example of use

Starfix tool




1 Fit the applicator



2 Adjust



The 2-material handle gives an excellent grip

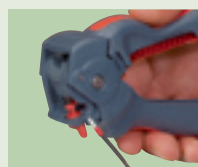

3 Insert the wire




4 Crimp


Starfix S tool



1 Adjust the cross-section

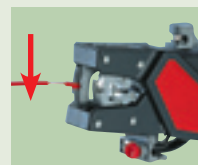

2 Strip and twist

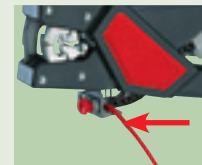

3 Crimp

Viking 3: Screw or spring connection terminal blocks and common accessories

see p. 350 to 353