Flexible Edge Strip for Sanitary Ceramics

The bag includes:

- 3 x flexible edge strips 50 cm
- 4 x mounting screws Ø6 x 100 mm
- 4 x rawl plugs Ø8
- 4 x centring bushings and white plastic cover caps
- 1 x connection hose 1/2" x 1/2" x 400 mm in white

The surface of the toilet must be thoroughly cleaned and completely dry.




1. Remove the brown protective paper from the edge strip.



2. Place the flexible edge strip onto the toilet, as displayed in the picture, with the sticky side facing down towards the toilet along its outer edge.



3. Cut or shear off any excess edge strip with sharp scissors or a knife so that the edges match.

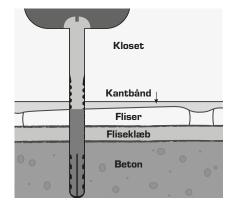

4. The balancing effect of the flexible edge strip.



5. The flexible edge strip can be adapted to even very sharp curves.



6. By removing one or more "teeth", the flexible edge strip can bend to 90°.



7. Once the toilet is fitted, grout it with sanitary silicone.

Multiple potential applications

The flexible edge strip is also an ideal choice for installation on sinks as well as wall-hung closets between the porcelain ware and the wall.



