

PowerLogic


PowerTag System

Design and Commissioning Guide

PowerLogic offers power quality, uptime, and efficiency.

DOCA0194EN-00

11/2020

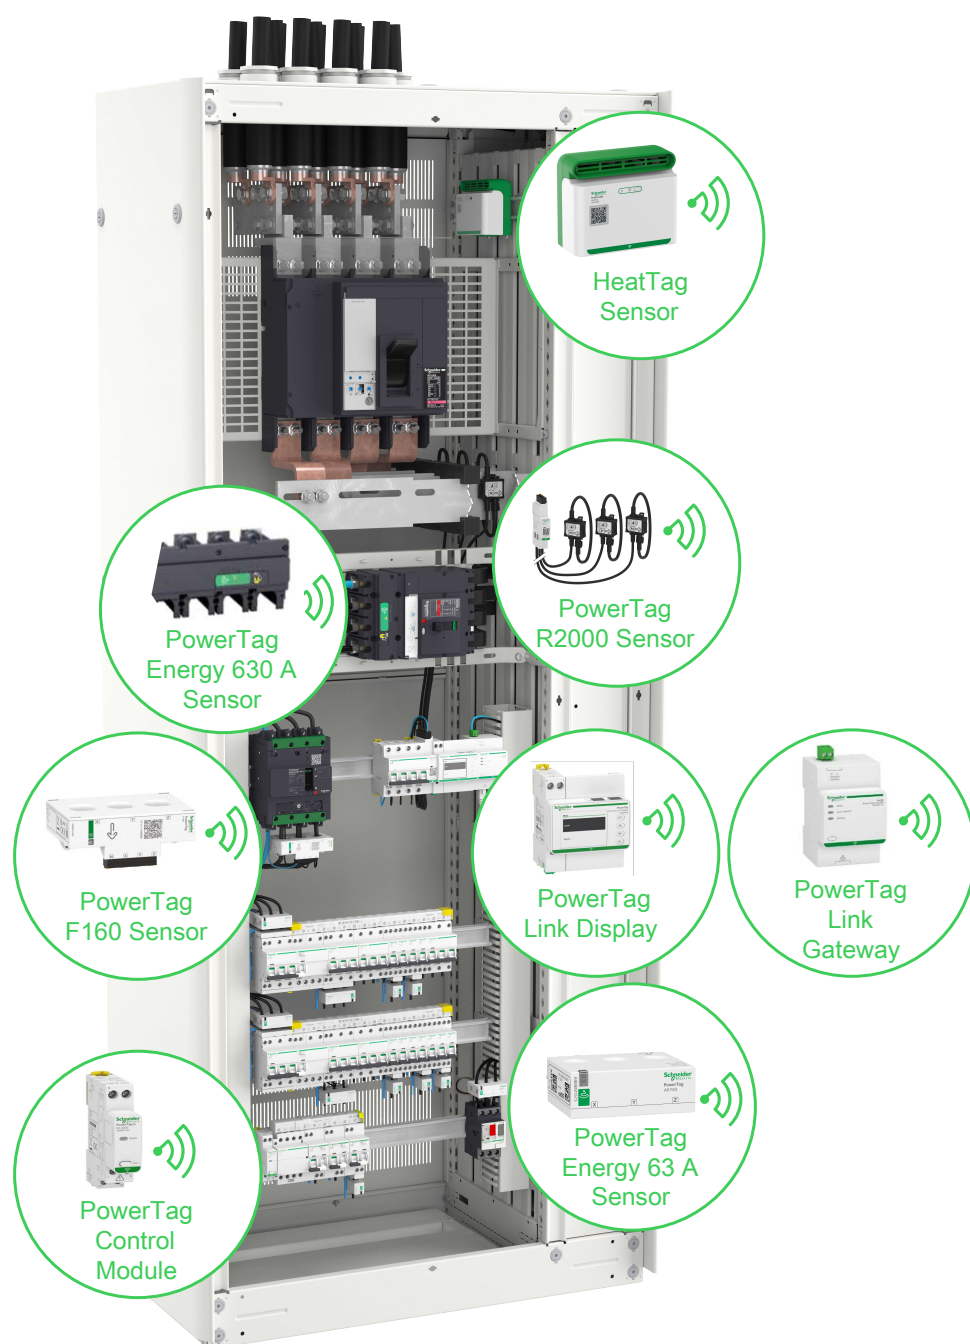

Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Table of Contents

Important Information	5
About the Book.....	6
PowerTag System Presentation	8
Introduction	8
PowerTag System Enclosure	9
PowerTag System Architecture Ranking.....	10
PowerTag System Engineering Workflow	11
PowerTag System Enclosure Design.....	12
Generic Design Rules	12
Enclosure Implementation Rules	16
Wireless Channel Assignment Plan Design	18
Wireless Channel Assignment Plan Definition.....	18
Wireless Channel Assignment Prerequisite	18
Wireless Channel Assignment Procedure.....	19
Wireless Parameters in PowerTag System	19
Wireless Channel Selection Mode.....	19
Wireless Channel.....	20
Wireless Communication Periods.....	21
Wireless Channel Assignment Plan Rules	22
PowerTag System Commissioning	25
Commissioning Rules	25

Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Book

Document Scope

PowerTag System is a Schneider Electric wired/wireless solution designed to connect and digitize the electrical distribution installation and to perform energy management and monitoring, from the switchboard in-come down to the load level.

This guide is intended for design of PowerTag system in basic electrical panel with only one gateway up to large installation with a high number of power data units, gateways, and wireless devices.

It guides users to:

- Design and build a reliable PowerTag system.
- Understand and apply wireless design rules in case of advanced wireless architecture.

It also provides recommendations for the PowerTag system commissioning.

Validity Note

The PowerTag system can be integrated into any building management or any electrical distributions architecture. It offers several types of gateways (Smartlink Modbus, Smartlink SIB, PowerTag Link, and PowerTag Link HD), which can be associated to wired and/or wireless devices to offer the following features:

- Metering with PowerTag energy sensors
- Monitoring and Control with wired Acti9 devices with TI24 interface and wireless PowerTag control modules
- Detection of abnormal heating of power cables in panel with HeatTag sensor (commercialized in January 2021)
- Local display of electrical measures with PowerTag Link display

Based on the Modbus TCP protocol, the PowerTag system allows switchboard data to be exchanged in real time with a supervision system or a PLC.

Online Information

The information contained in this guide is likely to be updated at any time. Schneider Electric strongly recommends that you have the most recent and up-to-date version available on www.se.com/ww/en/download.

The technical characteristics of the devices described in this guide also appear online. To access the information online, go to the Schneider Electric home page at www.se.com.

Related Documents

Title of Documentation	Reference Number
PowerTag Link Gateway – User Guide	DOCA0157EN
Smartlink SI B Gateway – User Guide	DOCA0123EN
Smartlink Modbus Communication System – User Guide	DOCA0004EN
PowerLogic HeatTag – User Guide	DOCA0171EN
PowerTag Link Gateway – Instruction Sheet	PHA81113
Smartlink SI B Gateway – Instruction Sheet	NVE12086

Title of Documentation	Reference Number
Smartlink Modbus Gateway – Instruction Sheet	<u>S1B33423</u>
PowerTag C IO 230 V Control and Monitoring Wireless Communication Module – Instruction Sheet	<u>MFR25181</u>
PowerTag C 2DI 230 V Monitoring Wireless Communication Module – Instruction Sheet	<u>MFR25190</u>
PowerTag Link Display – Instruction Sheet	<u>GDE66713</u>
PowerLogic HeatTag – Instruction Sheet	<u>MFR5173801</u>
PowerTag M63 Energy Sensor – Instruction Sheet	<u>EAV31628</u>
PowerTag P63 Energy Sensor – Instruction Sheet	<u>QGH78639</u>
PowerTag F63 Energy Sensor – Instruction Sheet	<u>QGH78642</u>
PowerTag F160 Energy Sensor – Instruction Sheet	<u>MFR85580</u>
PowerTag R2000 Energy Sensor – Instruction Sheet	<u>GDE25175</u>
PowerTag M250 Energy Sensor – Instruction Sheet	<u>QGH46815</u>
PowerTag M630 Energy Sensor – Instruction Sheet	<u>QGH46820</u>
PowerTag M250/M630 on ComPact NSX Plug-in Base – Instruction Sheet	<u>MFR37601</u>

Trademark Notice

All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.

PowerTag System Presentation

Introduction

PowerLogic Master Range


PowerLogic smooths the power supply, protects the network, the installation and the operator by improving the power factor and hence the quality of the power. It also allows for remote control of equipment and the monitoring of its performance and condition in real time.

Overview

The PowerTag system can be adapted to design a basic electrical distribution panel with only one gateway or large installation with a high number of power data units, gateways, and wireless devices.

The PowerTag system consists of:

- Gateways
- Wired Acti 9 devices
- Wireless PowerTag devices

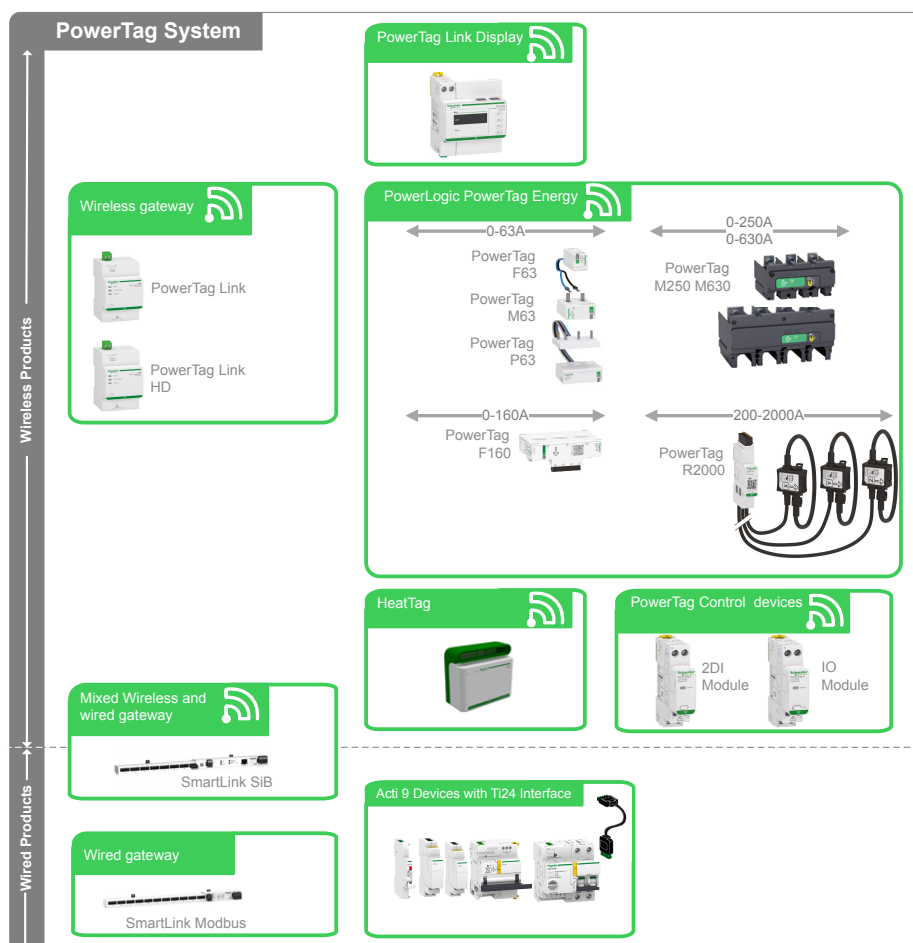

For more information on the system components, refer to [Related Documents](#), page 6.


PowerTag System Enclosure

The PowerTag system is designed for mounting inside low voltage (LV) enclosures. It can be mounted from simple plastic panel (for example, Kaedra panel) up to multi-column (non-partitioned) metallic switchboard (for example, Okken switchboard, BlokSeT switchboard, and PrismaSeT panel).

The PowerTag system can be also mounted inside the enclosures provided by third party manufacturers.

Metallic partition inside the enclosure impacts the wireless communication.

Follow the wireless design rules (refer to [Generic Design Rules](#), page 12) to have an efficient wireless communication in the panels or switchboards.

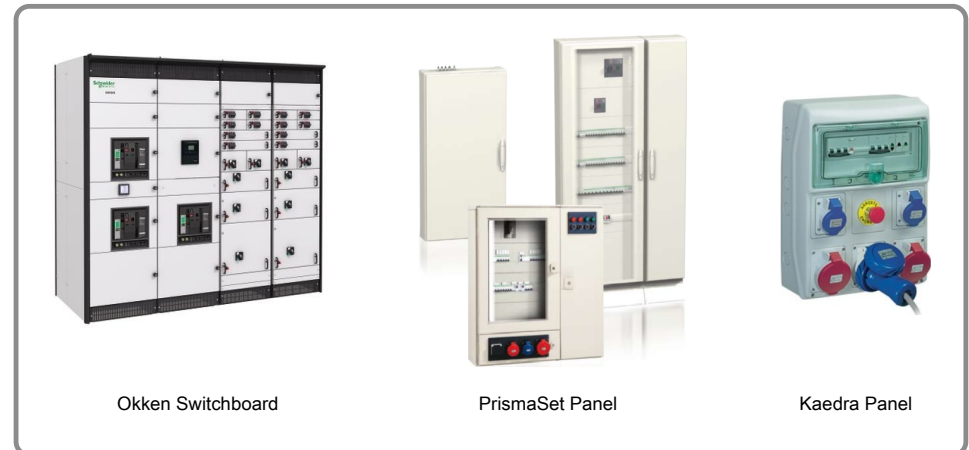

PowerTag System Architecture Ranking

The PowerTag system architecture is ranked as:


- **Sparse wireless architecture:** When only one gateway communicates in a radius of 20 meters.
- **Concentrated wireless architecture:** When two gateways communicate in a radius of 20 meters.

In Concentrated wireless architecture, the communication load of the wireless PowerTag system must be balanced on several channels. It is required to create a Wireless Channel Assignment Plan (refer to [Wireless Channel Assignment Plan Definition](#), page 18) to study this type of architecture.

NOTE: The radius of 20 meters is the distance to confirm that the two PowerTag systems are totally independent.

The maximum distance for communication between the gateway and the wireless devices is 3 meters (refer to [Rule GEN4](#), page 13).

The following figure shows various examples of PowerTag system architectures:

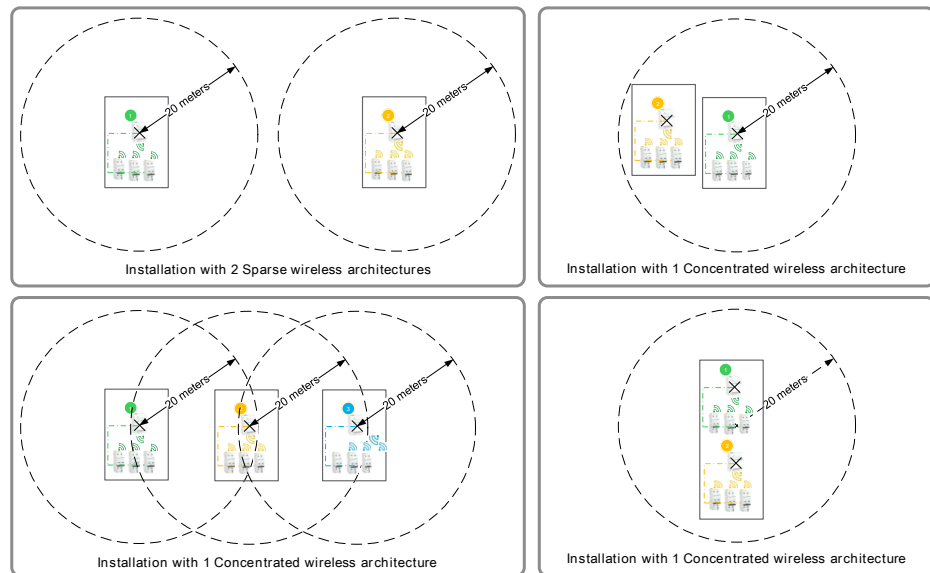





PowerTag System Engineering Workflow

The PowerTag System engineering workflow consists of the following design phases:

- PowerTag system enclosure design
 - For generic design rules, refer to [Generic Design Rules](#), page 12.
 - For enclosure implementation rules, refer to [Enclosure Implementation Rules](#), page 16.
- Radio frequency plan design
 - For wireless channel assignment plan, refer to [Wireless Channel Assignment Plan Definition](#), page 18.
- PowerTag system commissioning
 - For commissioning rules, refer to [Commissioning Rules](#), page 25.

Graphic Rules

The following legends are used to qualify the architecture and implementation:

Icon	Description
	Architecture or implementation forbidden
	Architecture or implementation possible
	Architecture or implementation recommended
	Remarks


PowerTag System Enclosure Design

Generic Design Rules

Rule GEN1: Mount the devices of the system in the same enclosure.

The gateway and the associated wireless devices shall be mounted in the same enclosure (plastic or metallic) to have:

- A wireless perimeter protected against the wireless external disturbances (especially for the metallic enclosure)
- A perimeter always with the same wireless propagation behavior (irrespective of the enclosure material)

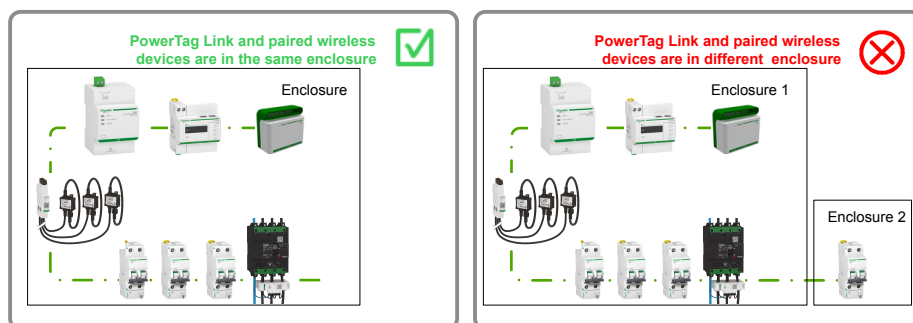

Rule GEN2: Mount the PowerTag energy sensor downstream the circuit breaker.

If the circuit breaker is top fed, mount the PowerTag energy sensor at the bottom of the circuit breaker. But:


- If the circuit breaker is bottom fed, it is recommended to mount the PowerTag energy sensor on the top of the circuit breaker
- If the circuit breaker is coupled with Residual Current Device Add-on, use PowerTag Flex energy sensor.

The advantage of PowerTag energy sensor downstream circuit breaker is that the voltage loss alarm is generated for each PowerTag energy sensor.




Rule GEN3: Mount the PowerTag energy sensor upstream a contactor, a variable speed drive, or a motor starter.

It is not possible to mount the PowerTag energy sensor downstream a contactor, a variable speed drive, or a motor starter.


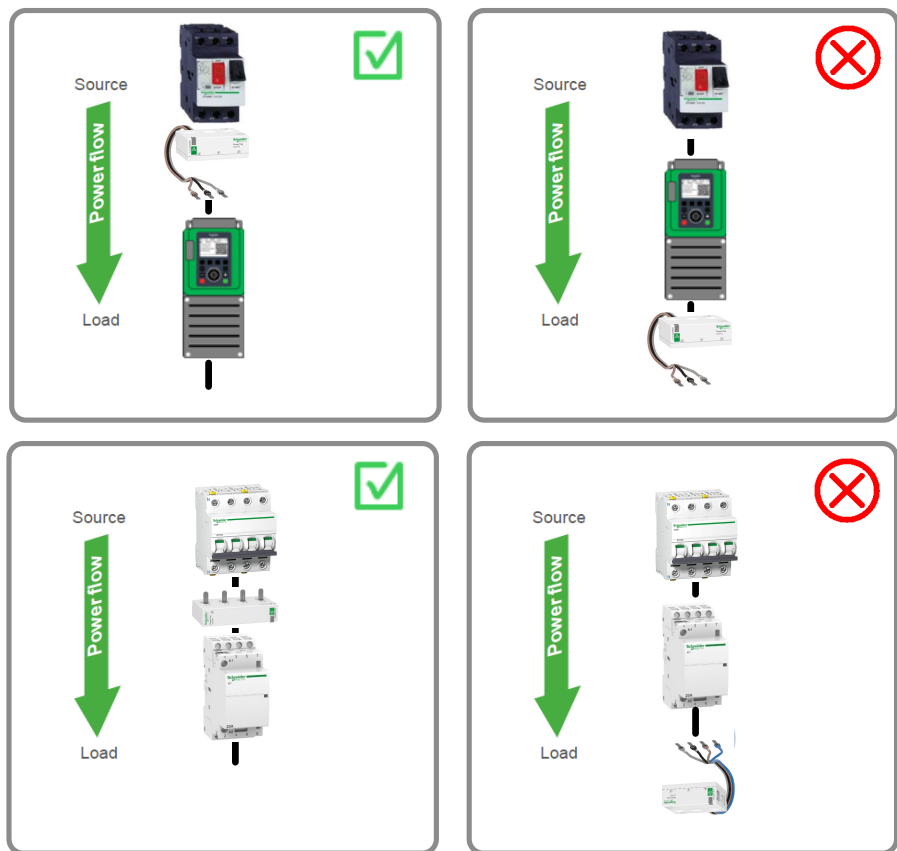
**Rule GEN4: 3 meters maximum between the gateway and the wireless devices.**

To avoid wireless communication disturbances, the gateway and the wireless devices must be mounted with a maximum distance of 3 meters between them.

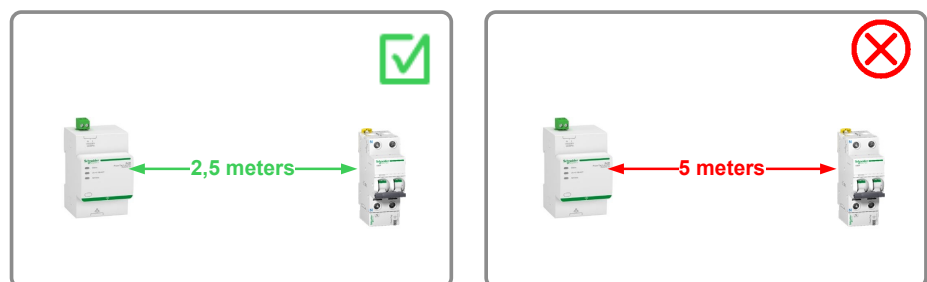

Rule GEN5: No metallic partition between the gateway and the wireless devices.

To avoid wireless communication disturbances, the gateway and the wireless devices must be mounted without metallic partition between them.

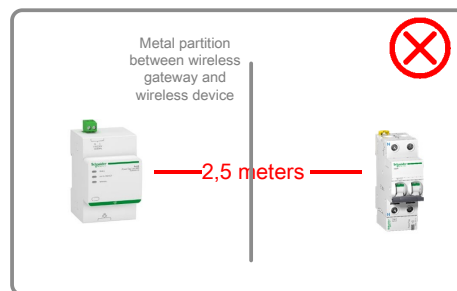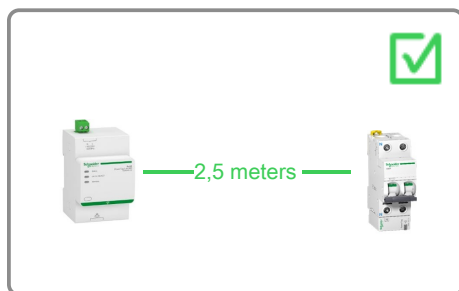

Rule GEN6: Follow the maximum capacity of the system.

For more information on the maximum number of wireless devices per gateway, refer to the below user guides, as applicable:

- [DOCA0157EN](#) PowerTag Link Gateway – User Guide
- [DOCA0123EN](#) Smartlink SI B Gateway – User Guide


Rule GEN7: Balance the number of wireless devices between the gateways.

When several gateways are installed in the same panel, balance the PowerTag control modules and other wireless devices between them.


The balancing of these devices is necessary to avoid having a fully loaded gateway and to optimize the wireless communication.

The following figures show examples of balanced and unbalanced wireless devices:

In example 1, the PowerTag energy sensors and PowerTag control modules are balanced between the two gateways.

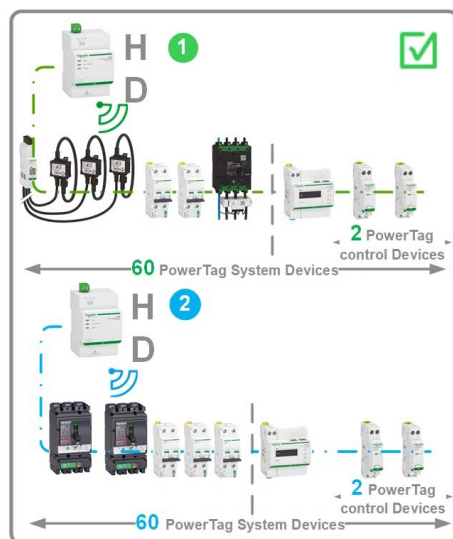


In example 2 and 3, the PowerTag energy sensors or PowerTag control modules are not balanced between the two gateways.

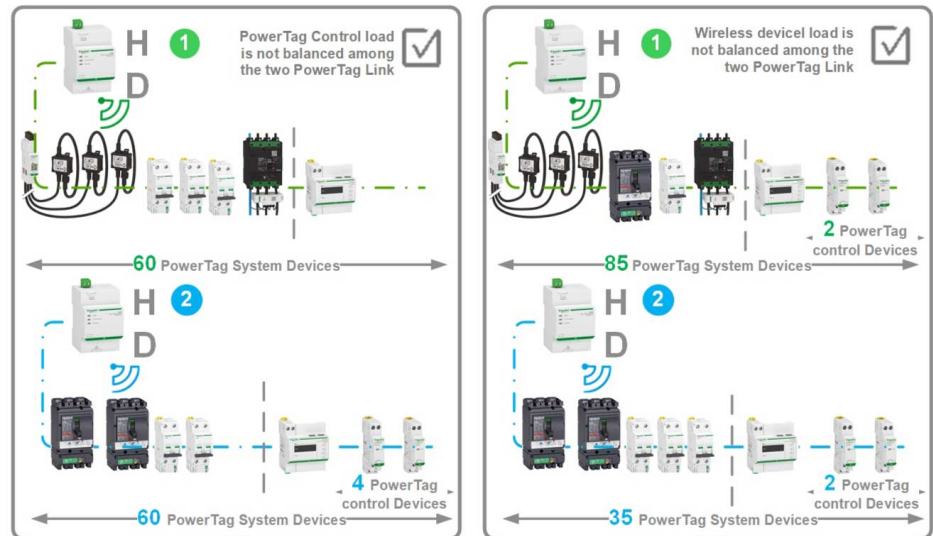

Enclosure Implementation Rules

Rule SW1: Mount the gateway in the center of the switchboard.

Reduce the distance between the gateway and the wireless devices to avoid wireless communication disturbances.

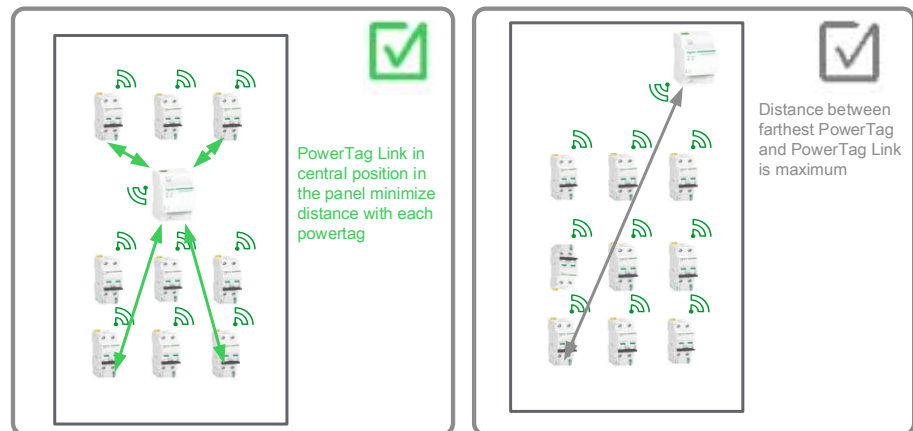


Rule SW2: Supply the wireless devices and gateway as upstream as possible in the switchboard.

To secure the power supply of a gateway, PowerTag Link display, PowerTag control modules, and HeatTag sensor, it is recommended:


- to use a secured incomer (UPS) when available in the switchboard
- to connect it as upstream as possible in the switchboard near to the main circuit breaker

This method helps to limit the risk of power outage on these devices.

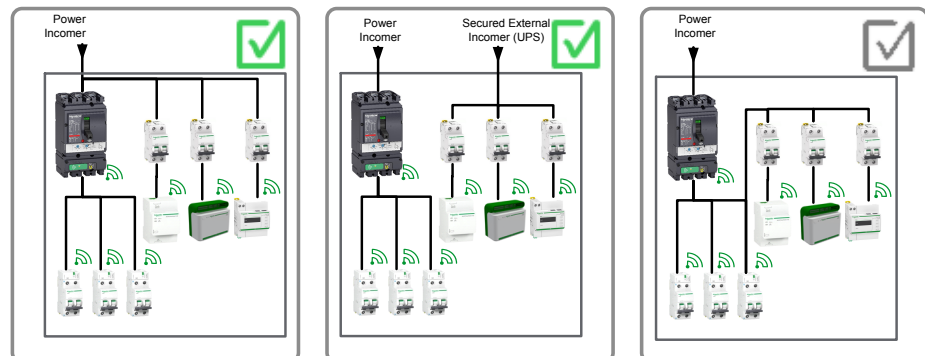


Rule SW3: Use one gateway per cubicle in partitioned switchboard.

Use one gateway per cubicle in partitioned switchboard to avoid wireless communication disturbances.

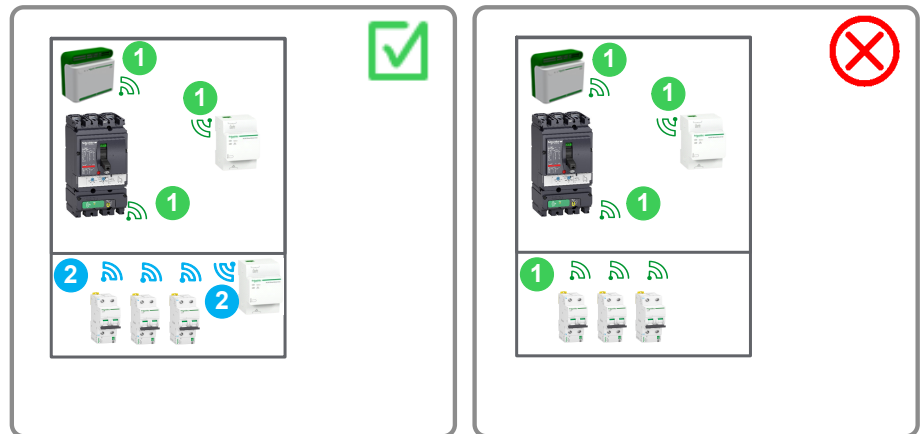

Rule SW4: Use one gateway for a maximum of three non-partitioned cubicles.

Use one gateway for a maximum of three non-partitioned cubicles with a maximum cubicle width of 0.7 meters, to avoid wireless communication disturbances.

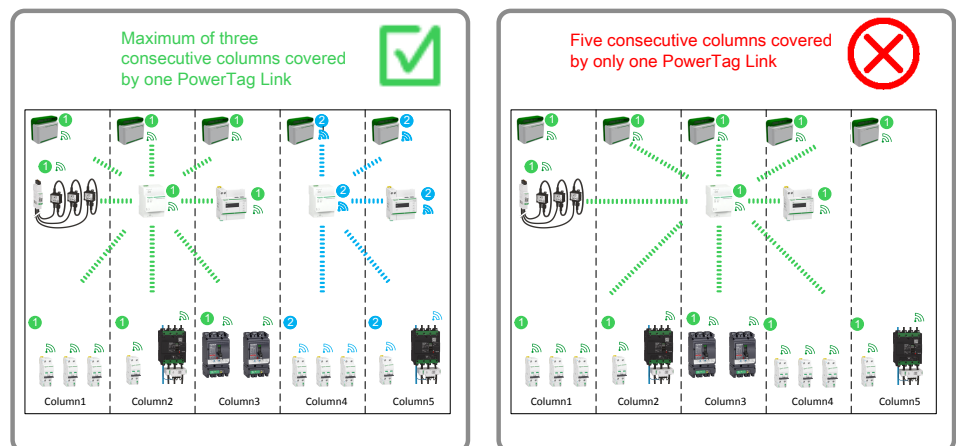

Wireless Channel Assignment Plan Design

Wireless Channel Assignment Plan Definition

Each gateway is set to one wireless channel.

A wireless channel has a limited bandwidth and it depends upon:

- the number of associated gateways and their paired wireless devices
- the wireless communication periods set in each gateway

NOTE: If the bandwidth in a channel exceeds the limit, it can lead to wireless communication disturbances and communication issues in the PowerTag system.

The two objectives of the wireless channel assignment plan are:

- to assign a channel (11 to 26) to each gateway, to balance communication loads and to avoid future communication.
- to define the two wireless communication periods:
 - one for the energy sensors and control modules
 - one for the HeatTag sensors



Wireless Channel Assignment Prerequisite

Before assigning the wireless channels, make sure that the following conditions are met:

- The total number of PowerTag systems for the architecture is defined.
- The panels are pre-designed in accordance with the enclosure implementation rules (refer to [Enclosure Implementation Rules](#), page 16). Therefore, the number of gateways and the number of wireless devices per PowerTag system for each type of panel is defined.
- The physical position of each panel in the architecture is defined.

Wireless Channel Assignment Procedure

Step	Action
1	Add all the panel in the layout of the zone (strictly follow the scale of the layout) and tag each panel with a label.
2	Indicate a legend to identify the type of panel and to associate easily with the PowerTag system.
3	Define the overlapped wireless channel using the wireless spectral analysis (refer to Rule WCAP2, page 22).
4	Define one or two reserved wireless channels for future evolution (refer to Rule WCAP3, page 23).
5	Define wireless channel for each gateway and associated wireless devices (refer to Rule WCAP4, page 23).
6	Define the wireless communication periods for the PowerTag energy sensor, control modules, and HeatTag sensor (refer to Rule WCAP5, page 24).

Wireless Parameters in PowerTag System

The parameters dedicated to wireless communication are defined in a gateway. These parameters are set through the webpage during the gateway commissioning:

- Wireless channel selection mode (automatic or manual)
- Wireless channel (only if wireless channel selection mode is set on manual)
- Wireless communication periods for energy monitoring, control sensors, and HeatTag sensor (future features)

For more details on wireless parameters, refer to the below user guides, as applicable:

- [*DOCA0157EN PowerTag Link Gateway – User Guide*](#)
- [*DOCA0123EN Smartlink SI B Gateway – User Guide*](#)

Wireless Channel Selection Mode

The wireless channels are selected by either of the two modes:

- Automatic
- Manual

Automatic Mode

The gateway selects the wireless channel automatically by analyzing the wireless load of each channel during the pairing phase. This mode is recommended only for sparse wireless architecture, which includes only one gateway in a radius of 20 meters. Refer to *PowerTag System Architecture Ranking*, page 10.

NOTE: The pairing phase is performed frequently in the panel builder workshop. In case of automatic mode selection, the wireless channel is defined according to the wireless environment of the workshop. The wireless environment can be different in end user site. Hence, the initial channel that is automatically selected is not always the optimal channel in terms of wireless performances.

Manual Mode


The value of wireless channel is filled by user during the commissioning phase. This value is obtained in the wireless channel assignment plan, which considers all the wireless environment around the PowerTag system.

Wireless Channel

During commissioning, the user defines the wireless channel used by PowerTag system for wireless bidirectional communication between the gateway and the paired wireless devices.

The value can be set from channel 11 to 26 in gateway webpage. Each channel is 2 MHz wide with an unused spacing of 5 MHz.


The following figure shows the radio frequency bandwidth per PowerTag system channel:

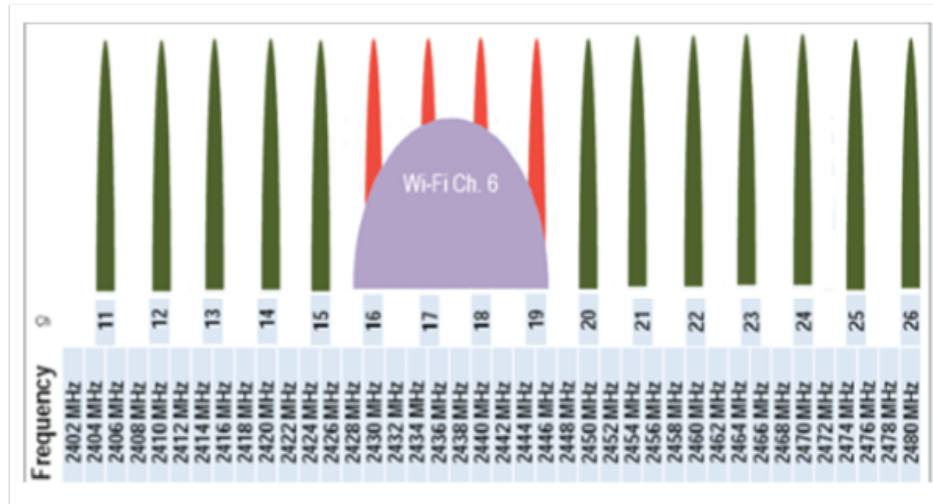

The frequency range associated to the selected channel in a gateway can be also used by another wireless system such as Wi-Fi network and third-party wireless equipment around it.

NOTE: In case of two contiguous wireless systems (PowerTag system or third-party radio frequency system such as Wi-Fi network), the system can run on the same bandwidth without any problem. However, it is recommended to segregate two different non-contiguous channels in the design phase (refer to Rule WCAP2, page 22).

The following figure shows the radio frequency bandwidth per Wi-Fi channel:

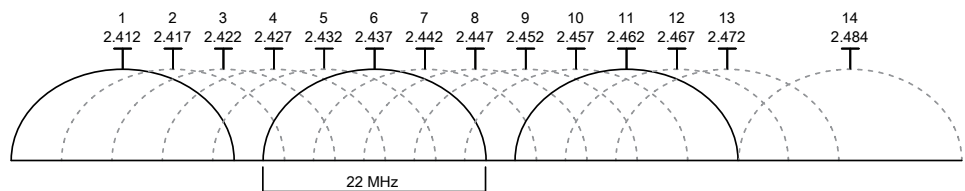

For example, Wi-Fi channel 6 (2427–2447 MHz bandwidth) and PowerTag system wireless channels 16, 17, 18, and 19 (2429–2431 MHz, 2434–2436 MHz, 2439–2441 MHz, 2444–2446 MHz bandwidth respectively) are based on the same frequency range. Hence, it is recommended to avoid these channels.

A free channel analyzer software such as Chanalyzer 4 software can be used on PC or smartphone to analyze the radio frequency occupation before defining the PowerTag system channels.

Wireless Communication Periods

The user defines the wireless communication periods for cyclic data exchanged between the gateway and the various types of wireless devices.

These periods have an impact on the periodic wireless traffic generated. Their values must be increased to decrease the wireless traffic, in case of concentrated architecture.

These periods have no impact on the response time for instantaneous wireless traffic generated on events. For example, a new input value detected on a wired input of a PowerTag control module will be immediately sent to the gateway to refresh the data irrespective of the value of the communication period. For more details, refer to the following table:

Wireless devices	Periodic wireless traffic		Instantaneous wireless traffic on event
	Period	Example of exchanged data	Example of exchanged data
PowerTag energy sensors	Adjustable range between 5–60 s	Electrical measures (voltage, current, power, and energy)	Voltage loss alarm
PowerTag control modules		On line device status	<ul style="list-style-type: none"> Input status Output order
HeatTag sensors (future feature)	Adjustable range between 120–600 s	Ambient measures (temperature)	Alarms

For more information on communication periods, refer to the below user guides, as applicable:





- [DOCA0157EN](#) PowerTag Link Gateway – User Guide
- [DOCA0123EN](#) Smartlink SI B Gateway – User Guide

Wireless Channel Assignment Plan Rules

Rule WCAP1: Assign non-contiguous channels in a panel.

Follow the rules to assign non-contiguous channels in a panel:



- Do not use the same channel for several gateways inside an enclosure.
- Do not use contiguous channel for adjacent gateway inside an enclosure.
- Prefer to use non-contiguous channels inside an enclosure.

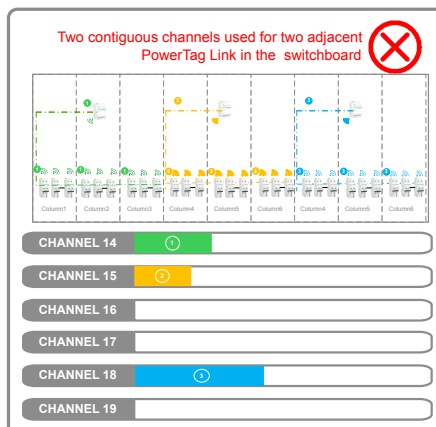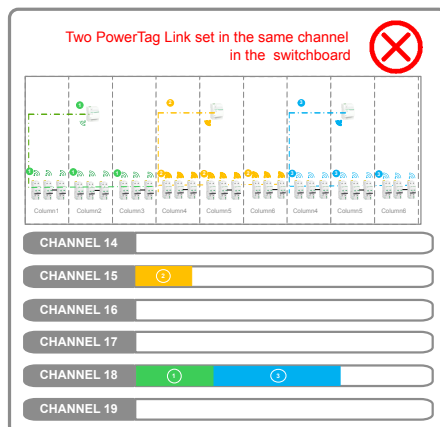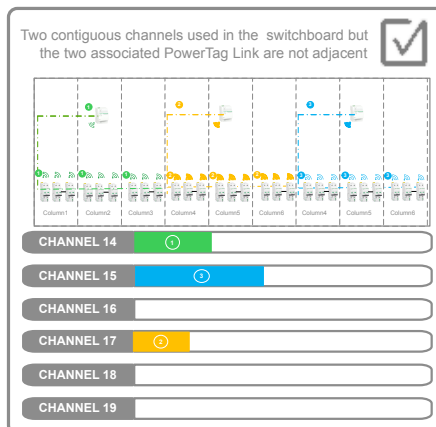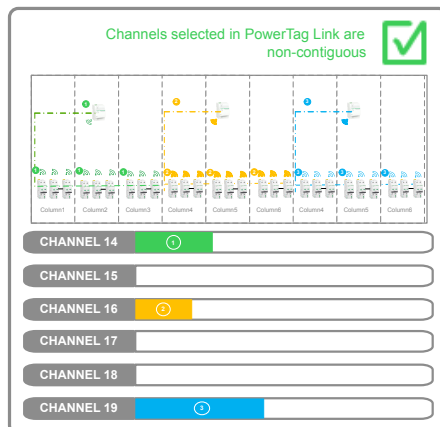

Rule WCAP2: Privilege channel not overlapped by another radio frequency signal.

Follow the rules to avoid overlapping of privilege channel by another radio frequency signal:

- Do not use the privileged channels if they are known before the design plan of wireless channel assignment plan design.
- Check the behavior of the PowerTag system during commissioning in the end user site.

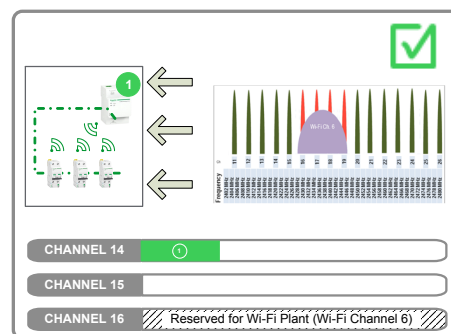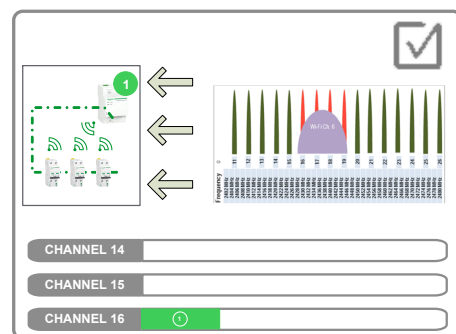

Rule WCAP3: Reserve channels for future evolution.

Follow the rules to reserve the channels for future evolution::

- Two channels, if the density will be up to 1500 wireless devices in a radius of 20 meters.
- One additional dedicated channel, if any third-party radio frequency network is to be added for other wireless system.



Rule WCAP4: Define the available channels.


Follow the rules to define the available channels:

- Use all the available channels to balance the gateways and their paired wireless devices.

Available channels = 16 - overlapped channels - reserved channels

- Use the channels uniformly.
- Priority 1: Maximize the distance between the gateway using the same channel.
- Priority 2: Maximize the distance between the gateway using channel X and adjacent channels – Channel X-1 and X+1.

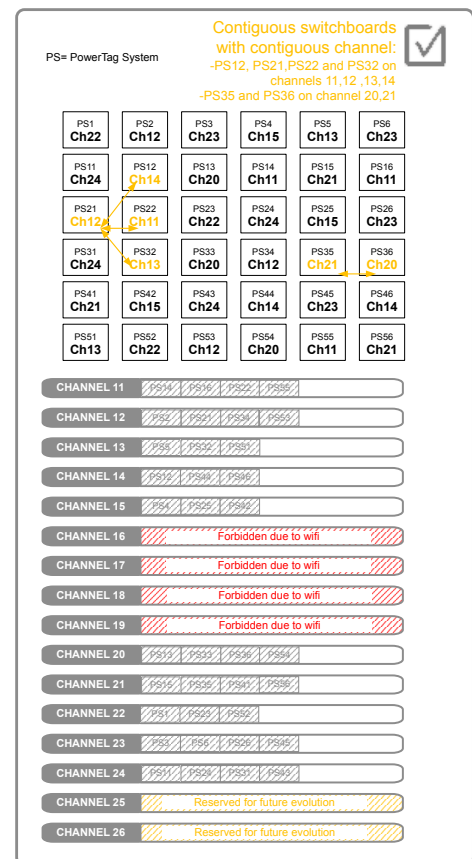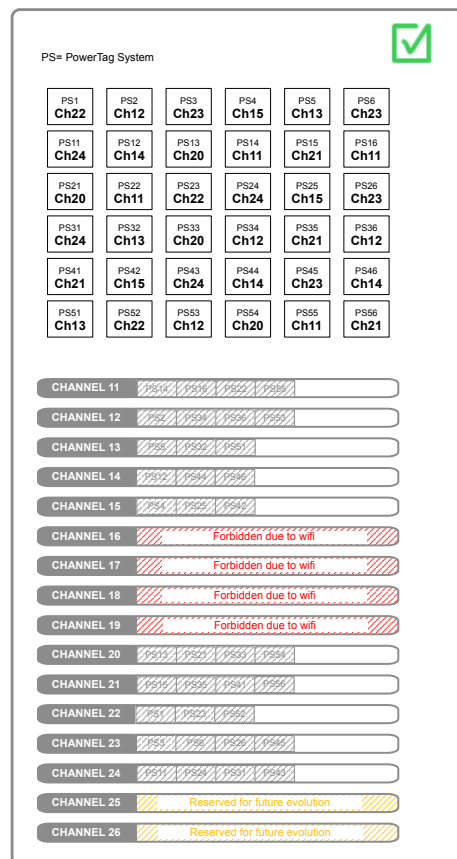

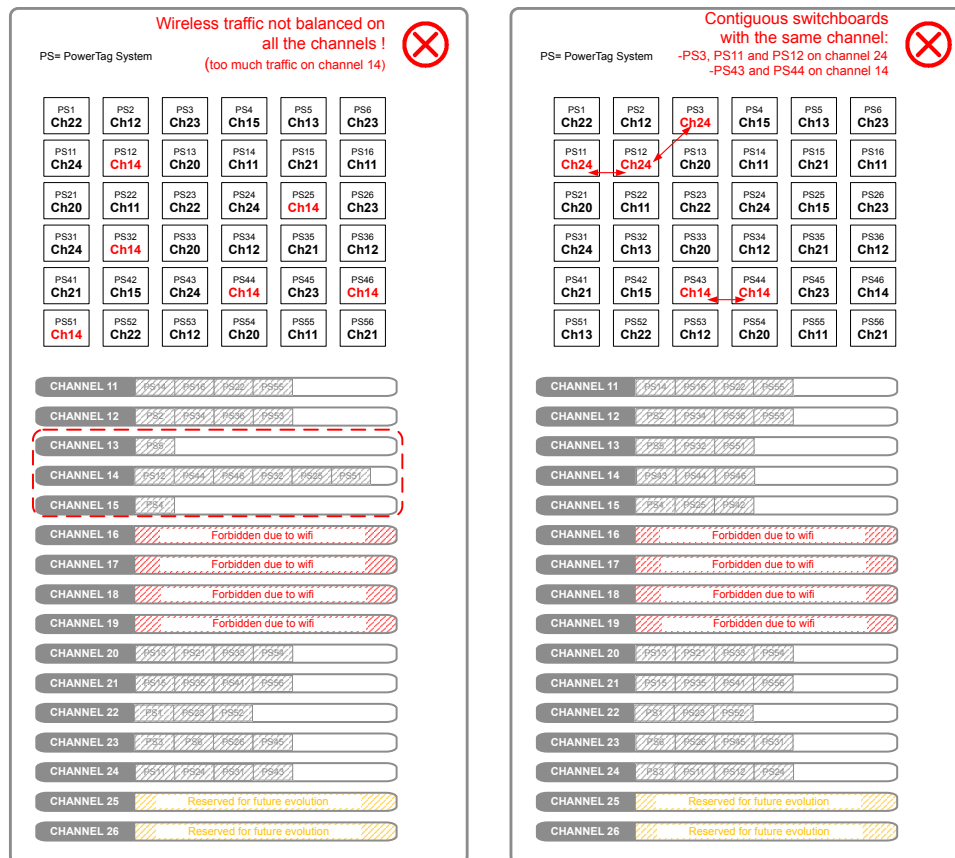

Rule WCAP5: Define two wireless communication periods according to the wireless devices density.

Follow the rules to define the values of two wireless communication periods:

- Set the same wireless communication periods for all gateways of the zone.
- Up to 400 wireless devices in a radius of 20 meters, set the wireless communication periods to 30 seconds minimum.
- Up to 600 wireless devices in a radius of 20 meters, set the wireless communication periods to 60 seconds minimum.
- More than 600 wireless devices in a radius of 20 meters, contact your Schneider Electric representative.

Number of wireless devices in a radius of 20 m	Minimum wireless communication period recommended ($T_{\text{wireless comm}}$)
Up to 100	5 s
Up to 200	10 s
Up to 400	30 s
Up to 600	60 s

$T_{\text{wireless comm}}$ is the wireless communication period defined for the type of device in the gateway configuration.


PowerTag System Commissioning

Commissioning Rules

The commissioning rules are applicable to the gateway webpages.

Rule COM1: Use the Manual Channel Selection mode in concentrated wireless architecture.

In concentrated wireless architecture, the PowerTag systems interfere between themselves. Therefore, the channel must be set according to the wireless channel assignment plan in Manual Channel Selection mode.

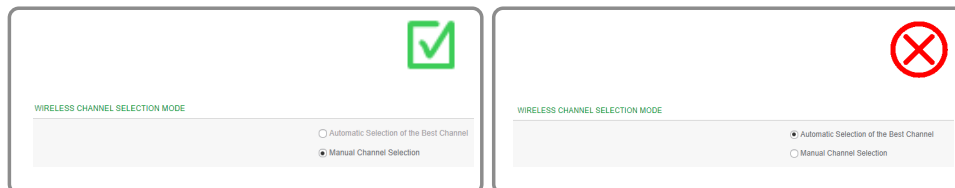

Rule COM2: Configure the wireless channel before the wireless devices discovery.

- Set the channel value before pairing the wireless devices to save time.
- In case of wireless channel modification after pairing, the PowerTag system will need several minutes or hours to recover wireless communication.

Rule COM3: Save the PowerTag Link gateway configuration.


Generate a backup file of the PowerTag Link gateway configuration at the end of the commissioning.

NOTE: It is not possible to generate a backup file with a Smartlink SIB gateway.

It is possible to replace a defective PowerTag Link gateway by a new one without load power outage if a backup file was previously generated and saved.

Without this backup file, it is mandatory to restart all the wireless devices (and interrupt the associated supply load) to replace the PowerTag Link gateway.

It is recommended to generate and save these backup files, especially when the PowerTag Link gateway is to be installed with high level of continuity of service and critical supply load.

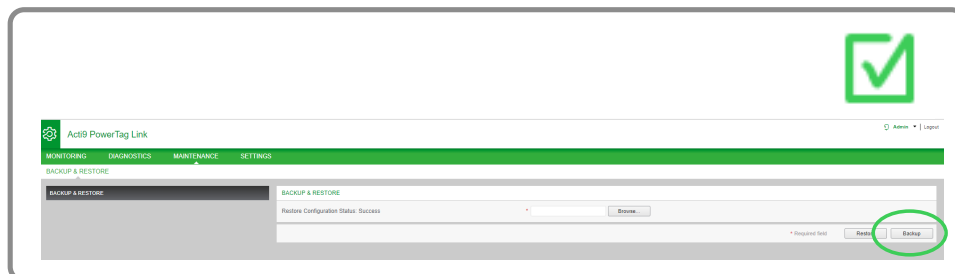

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2020 – Schneider Electric. All rights reserved.

DOCA0194EN-00