## **SIEMENS**

Data sheet 3UG5512-1AR20



monitoring relay phase failure, phase sequence and asymmetry monitoring 3x 160-690 V AC, 15-70 Hz 1 changeover contact screw terminal

product brand name	SIRIUS
product designation	Line monitoring relay
design of the product	monitoring of phase sequence, phase failure and asymmetry
product type designation	3UG5
General technical data	
product function	line monitoring
display version LED	Yes
design of the display	LED
power loss [W] maximum	1.8 W
power loss [V·A] maximum	5.1 VA
insulation voltage for overvoltage category III according to IEC 60664	
<ul> <li>with degree of pollution 2 rated value</li> </ul>	690 V
with degree of pollution 3 rated value	690 V
degree of pollution	3
type of voltage	
• for monitoring	AC
<ul> <li>of the operating voltage for actuation</li> </ul>	AC/DC
of the control supply voltage	AC
surge voltage resistance rated value	6 kV
protection class IP	IP20
shock resistance according to IEC 60068-2-27	sinusoidal half-wave 15g / 11 ms
switching behavior	monostable
mechanical service life (operating cycles) typical	10 000 000
electrical endurance (operating cycles) at AC-15 at 230 V typical	100 000
thermal current of the switching element with contacts maximum	5 A
reference code according to IEC 81346-2	K
Substance Prohibitance (Date)	06/01/2023
SVHC substance name	Blei - 7439-92-1 Bleimonoxid (Bleioxid) - 1317-36-8
Product Function	
product function	
undervoltage detection	No
overvoltage detection	No
<ul> <li>phase sequence recognition</li> </ul>	Yes
phase failure detection	Yes; available but limited, detection is problematic with high levels of regenerative power recovery
asymmetry detection	Yes; not adjustable, indirectly by monitoring the voltage limit values
<ul> <li>overvoltage detection 3 phase</li> </ul>	No
<ul> <li>undervoltage detection 3 phases</li> </ul>	No

well-are window. W. O. I	N-
voltage window recognition 3 phase     adjustable approach significant purposes in the second significant purposes i	No No
adjustable open/closed-circuit current principle	No
auto-RESET	Yes
suitability for use safety-related circuits	No
Control circuit/ Control	
control supply voltage at AC	00 000 1/
at 50 Hz rated value	90 690 V
at 60 Hz rated value	90 690 V
operating range factor control supply voltage rated value at AC at 50 Hz	0.05
• initial value	0.85
full-scale value  operating range factor control supply voltage rated value at AC at 60 Hz	1.1
• initial value	0.85
full-scale value	1.1
Supply voltage	
supply voltage frequency rated value	70 15 Hz
Measuring circuit	
measurable voltage at AC	90 690 V
buffering time in the event of power failure minimum	20 ms
response time maximum	500 ms
relative temperature-related measurement deviation	1 %
Precision	
relative metering precision	5 %
temperature drift per °C	0.003 %/°C
Short-circuit protection	
design of the fuse link	
<ul> <li>for short-circuit protection of the NO contacts of the relay outputs required</li> </ul>	gL/gG: 6 A or MCB type C: 1 A
• for short circuit protection of the NC contacts of the relay outputs required	gL/gG: 6 A or MCB type C: 1 A
Communication/ Protocol	
protocol is supported IO-Link protocol	No
type of voltage supply via input/output link master	No
Auxiliary circuit	
material of switching contacts	AgSnO2
number of NC contacts delayed switching	0
number of NO contacts delayed switching	0
number of CO contacts	
for auxiliary contacts	1
delayed switching	0
operating frequency with 3RT2 contactor maximum	5 000 1/h
contact reliability of auxiliary contacts	one incorrect switching operation of 100 million switching operations (17 V, 5 mA)
contact rating of auxiliary contacts according to UL	R300 / B300
Main circuit	
number of poles for main current circuit	3
ampacity of the output relay at AC-15	0.0
• at 250 V at 50/60 Hz	3 A
• at 400 V at 50/60 Hz	3 A
ampacity of the output relay at DC-13	4.0
• at 24 V	1.4
• at 110 V	0.2 A
• at 125 V	0.2 A
• at 250 V	0.1 A
• at 250 V	0.1 A 5 mA
operational current at 17 V minimum  continuous current of the DIAZED fuse link of the output relay	6 A
Electromagnetic compatibility	
EMC emitted interference according to IEC 60947-1	class A
LIVIO ETIILLEU ITLETTETETICE ACCOTUITU LO IEU 00947-1	class A

conducted interference	
due to burst according to IEC 61000-4-4	2 kV (power ports), 2 kV (signal ports)
due to conductor-earth surge according to IEC 61000-4-5	2 kV
<ul> <li>due to conductor-conductor surge according to IEC 61000-4-5</li> </ul>	1 kV
field-based interference according to IEC 61000-4-3	10 V/m
electrostatic discharge according to IEC 61000-4-2	6 kV contact discharge / 8 kV air discharge
Galvanic isolation	
design of the electrical isolation	galvanic isolation
galvanic isolation	
between input and output	Yes
between the voltage supply and other circuits	Yes
Connections/ Terminals	
product component removable terminal for main circuit	Yes
product component removable terminal for auxiliary and	Yes
control circuit	
type of electrical connection	screw-type terminals
design of terminals with cross-head screw	PZ 1
type of connectable conductor cross-sections	4 (05 40 3) 0 (05 25 3)
• solid	1x (0.5 4.0 mm²), 2x (0.5 2.5 mm²)
finely stranded with core end processing	1x (0.5 4 mm²), 2x (0.5 2.5 mm²)
• for AWG cables solid	1x (20 12), 2x (20 14)
connectable conductor cross-section	0.5 4
• solid	0.5 4 mm <sup>2</sup>
finely stranded with core end processing	0.5 4 mm <sup>2</sup>
AWG number as coded connectable conductor cross section	
• solid	20 12
stranded	20 12
tightening torque with screw-type terminals	0.6 0.8 N·m
stripped length	10 mm
Installation/ mounting/ dimensions	
installation/ mounting/ unitensions	
mounting position	any
	any screw and snap-on mounting onto 35 mm DIN rail
mounting position	·
mounting position fastening method	screw and snap-on mounting onto 35 mm DIN rail
mounting position fastening method height width depth	screw and snap-on mounting onto 35 mm DIN rail 100 mm
mounting position fastening method height width depth required spacing	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm
mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm
mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm  0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — backwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm  0 mm  0 mm  0 mm  0 mm  0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — at the side • for grounded parts — forwards — backwards — backwards — upwards — at the side	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — at the side — downwards	screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — at the side • for grounded parts — forwards — backwards — backwards — backwards — backwards — in the side — downwards • for live parts — forwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards  • for live parts — forwards — backwards — backwards — upwards — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — downwards	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — downwards — backwards — upwards — backwards — upwards — at the side	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — the side — downwards — backwards — upwards — at the side Ambient conditions	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — at the side — downwards — backwards — upwards — backwards — upwards — at the side  Ambient conditions installation altitude at height above sea level maximum	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — backwards — upwards — backwards — upwards — backwards — upwards — at the side  Ambient conditions installation altitude at height above sea level maximum ambient temperature	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — the side — downwards — backwards — upwards — backwards — upwards — at the side  Ambient conditions installation altitude at height above sea level maximum	screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm

• during transport

-40 ... +85 °C

relative humidity during operation

70 %

Approvals Certificates

## **General Product Approval**

**Test Certificates** 

Confirmation









Type Test Certificates/Test Report

other

Confirmation

## Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3UG5512-1AR20

Cax online generator

 $\underline{\text{http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en\&mlfb=3UG5512-1AR20}$ 

 $Service \& Support \ (Manuals, \ Certificates, \ Characteristics, \ FAQs, ...)$ 


https://support.industry.siemens.com/cs/ww/en/ps/3UG5512-1AR20


Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax\_de.aspx?mlfb=3UG5512-1AR20&lang=en


**Characteristic: Derating** 


https://support.industry.siemens.com/cs/ww/en/ps/3UG5512-1AR20/manual

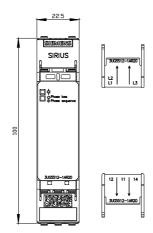


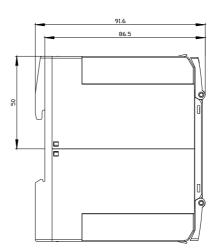

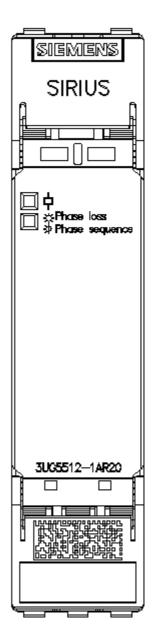

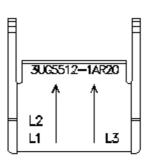

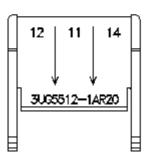

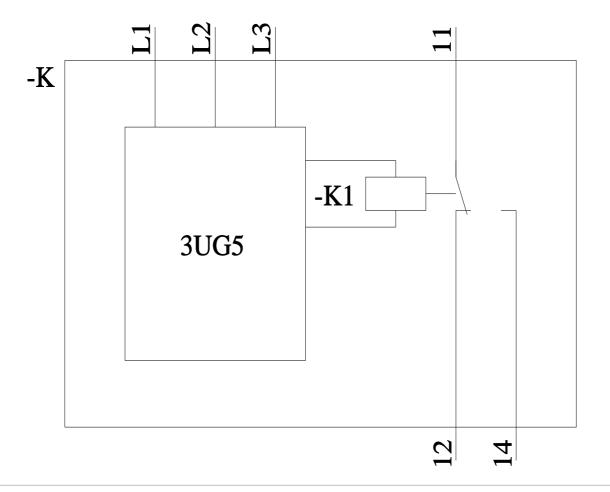

last modified: 12/13/2023 🖸